


KV-M2150U/M2151U KV-M2150L/M2151L

RM-826

SERVICE MANUAL

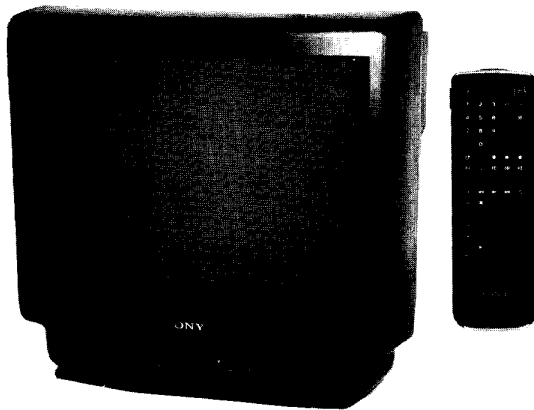

UK Model

KV-M2150U

Chassis No. SCC-D86N-A

KV-M2151U

Chassis No. SCC-D86M-A

Irish Model

KV-M2150L

Chassis No. SCC-D88G-A

KV-M2151L

Chassis No. SCC-D88F-A

BE-2A CHASSIS

MODELS OF THE SAME SERIES

KV-M2150U/51U/50L/51L	KV-M2140L/M2141L
KV-M2140U/M2141U	KV-M1620L
KV-M1620U/M1621U	KV-M1420L

SPECIFICATIONS

[KV-M2150U/M2151U/M2150L/M2151L]

Television system	I
Color system	PAL
Channel coverage	UHF: 21-69 (KV-M2150U/M2151U) VHF: A-J UHF: 21-69 (KV-M2150L/M2151L)
Picture tube	Black Trinitron tube 90° degree deflection Approx. 54.5 cm (21 inches) (Approx. 51.0cm picture measured diagonally)
Inputs	21-pin connector: CENELEC standard Including RGB input VGA Audio/Video input jacks: phono jacks S-Video input
Outputs	21-pin connector: CENELEC standard Headphones jack: minijack
Sound output	6 W (Music)

Power consumption	96W (KV-M2150U) 99W (KV-M2151U) 70.5Wh (KV-M2150L) 73.5Wh (KV-M2151L)
Dimensions	Approx. 513x477x478 mm (w/h/d)
Weight	Approx. 24 kg



[RM-826]



Remote control system	infrared control
Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Dimensions	Approx. 75×221×23mm (w/h/d)
Weight	Approx. 230g including batteries
Accessories supplied	IEC designation R6 batters (2)
Supplied accessories	RM-826 Remote Commander (1) IEC designation R6 batteries (2)

Design and specifications are subject to change without notice.



TRINITRON® COLOUR TV
SONY®

21 pin connector (, )

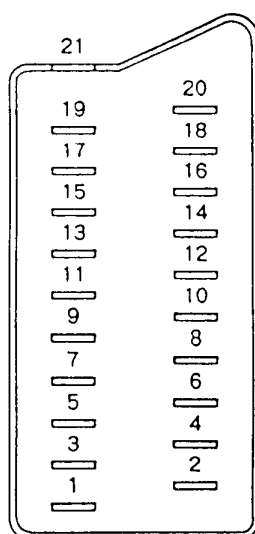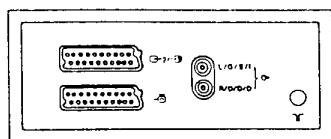

Pin No.	1	2	Signal	Signal level
1	<input type="radio"/>	<input type="radio"/>	Audio output B (right)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
2	<input type="radio"/>	<input type="radio"/>	Audio input B (right)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
3	<input type="radio"/>	<input type="radio"/>	Audio output A (left)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
4	<input type="radio"/>	<input type="radio"/>	Ground (audio)	
5	<input type="radio"/>	<input type="radio"/>	Ground (blue)	
6	<input type="radio"/>	<input type="radio"/>	Audio input A (left)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
7	<input type="radio"/>	<input checked="" type="radio"/>	Blue input	0.7V ± 3dB, 75ohms, positive
8	<input type="radio"/>	<input type="radio"/>	Function select (AV control)	High state (9.5 – 12V): Part mode Low state (0 – 2V): TV mode Input impedance: More than 10kohms Input capacitance: Less than 2 nF
9	<input type="radio"/>	<input type="radio"/>	Ground (green)	
10	<input type="radio"/>	<input type="radio"/>	Open	
11	<input type="radio"/>	<input checked="" type="radio"/>	Green	Green signal: 0.7V ± 3dB, 75ohms, positive
12	<input type="radio"/>	<input type="radio"/>	Open	
13	<input type="radio"/>	<input type="radio"/>	Ground (red)	
14	<input type="radio"/>	<input type="radio"/>	Ground (blanking)	
15	<input type="radio"/>	<input type="radio"/>	Red input	0.7V ± 3dB, 75ohms, positive
	<input type="radio"/>	<input type="radio"/>	(S signal) chroma input	0.3V ± 3dB, 75ohms, positive
16	<input type="radio"/>	<input checked="" type="radio"/>	Blanking input (Ys signal)	High state (1 – 3V) Low state (0 – 0.4V) Input impedance: 75ohms
17	<input type="radio"/>	<input type="radio"/>	Ground (video output)	
18	<input type="radio"/>	<input type="radio"/>	Ground (video input)	
19	<input type="radio"/>	<input type="radio"/>	Video output	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
	<input type="radio"/>	<input type="radio"/>	Video input	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
20	<input type="radio"/>	<input type="radio"/>	Video Input/Y (S signal)	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
21	<input type="radio"/>	<input type="radio"/>	Common ground (plug, shield)	

☐ connected ☒ unconnected (open)

* at 20Hz ~ 20kHz

4 pin connector ()

Pin No.	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB, 75ohms, positive Sync: 0.3V ; 1 dB
4	C (S signal) input	0.3V ± 3dB, 75ohms, positive

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			4. CIRCUIT ADJUSTMENTS		
1-1.	Presetting of Channels	4	4-1.	A Board Adjustments	16
1-2.	Basic TV Operation	5	4-2.	V Board Adjustment (KV-M2151U/M2151L only)	17
1-3.	Advanced TV Operation	5	5. DIAGRAMS		
1-4.	Teletext Operation (KV-M2151U/M2151L only)	6	5-1.	Circuit Boards Location	18
1-5.	Optional Connections/Operations	7	5-2.	Schematic Diagrams and Printed Wiring Boards (1) Schematic Diagram of A Board	21
1-6.	Additional Remote Commander Operation	7	(2) Schematic Diagrams of V, C and J1 Boards	25	
1-7.	Additional Information	8	5-3.	Semiconductors	28
2. DISASSEMBLY			6. EXPLODED VIEW		30
2-1.	Rear Cover Removal	10	7. ELECTRICAL PARTS LIST		31
2-2.	Service Position	10			
2-3.	V Board Removal (KV-M2151U/M2151L only)	10			
2-4.	Picture Tube Removal	11			
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	12			
3-2.	Convergence	13			
3-3.	Focus	15			
3-4.	Screen (G2) and White Balance	15			


Warning

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 5 amp capacity. Should the fuse need to be replaced, use a 5 AMP FUSE approved by ASTA to BS1362, ie carries the ⚡ mark.

IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR YOUR SOCKET OUTLETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET OUTLET. When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

How to replace the fuse

Open the fuse compartment with the blade screwdriver, and replace the fuse.

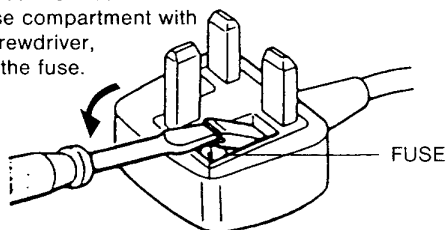**CAUTION**

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


SECTION 1 GENERAL

1-1. PRESETTING OF CHANNELS


Before viewing the TV programmes you need to preset TV channels. There are 60 spaces available for storing these channels. TV stations broadcast their channels at certain frequencies. You must preset these channels to programme numbers on the TV. Slide open the full-function side of the Remote Commander to reveal preset buttons.

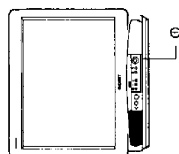

Automatic presetting of channels	
Action	Result
1 Turn on the TV using the power switch on the set.	
2 Press the PRESET button.	You are now in the preset mode. The programme number flashes.
3 Press either the number buttons or PROGR +/- to select the programme number on which you want to preset the channel. 	The selected programme number will be indicated.
Note: In the case of two digit numbers, first press +/-, then the two numbers.	
4 Press the + or - button repeatedly, until the desired channel is tuned in. 	The scale with the frequency band changes.
5 Repeat steps 3 and 4 for all other channels.	
6 Press the PRESET button to store the channels 	All channels are now stored. The programme number stops flashing.

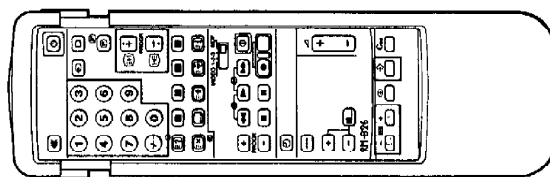




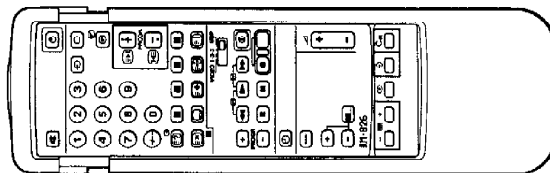


How to skip programmes	
Since you have 60 programmes at your disposal, you may want to skip vacant programme positions. This means that they are skipped when you press the PROGR +/- buttons.	
Action	Result
1 Press the PRESET button.	You are now in preset mode, the programme position flashes.
2 Use PROGR + or - to select the programme position you want to skip. 	The selected programme position appears.
3 Press C00. 	
4 Repeat steps 2 and 3 to skip other programmes.	
5 Press the PRESET button.	The programme position is now skipped. You are back in TV mode.
How to fine tune a channel manually	
If the reception of a stored channel is not satisfactory, you can fine tune the channel manually.	
Action	Result
Press the + or - button until the reception is good. 	The channel is now fine tuned.
Note: By pressing the respective programme number the automatic fine tuning will be restored.	

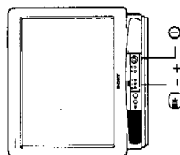

1-2. BASIC TV OPERATION

This section introduces you to the basic control functions which are available on the TV set and on the simple side of the Remote Commander.



How to turn the TV on and off	
Action	Result
Turning on Press the power switch  on the set.	The TV will turn on. Note: If the screen remains blank, the TV may be in standby mode. In this case, press  .
Turning off	
A Temporarily Press  .	The TV is now in standby mode. Press  or any number button to return to TV mode.
B Completely Press the power switch  .	The TV will turn off.



How to select programmes



Before selecting programmes make sure that you have preset channels.

Action	Result
Press PROG + or the respective number button. Note: In the case of two digit numbers first press +/- and then the two number buttons.	The selected programme is displayed.



On the set:
Press the + or - button for programme selection.



How to adjust the volume

Action	Result
Press  or  .	The volume markers will appear and the volume is adjusted accordingly.

On the set:
Press  until the  symbol is displayed, then adjust with the +/- buttons.


How to use additional functions





Viewing of Teletext: (only for KV-M2151U/KV-M2151L)
Press . To return to TV mode, press .

Viewing of the video input:
Press . To return to TV mode, press .

1-3. ADVANCED TV OPERATION

This section introduces you to the advanced control functions which are available on the full function side of the Remote Commander.

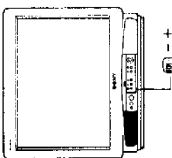


How to adjust the picture	
Action	Result
1 Press button  repeatedly, until the desired item is displayed. Note:  colour intensity,  brightness	The symbol and the level indicator for the selected item is displayed.
2 Press button + or - 	The picture item is adjusted.







On the set:
Press button  repeatedly in order to select the desired item, then adjust with button + or -.

To return to factory set levels:
Press the  button.

How to use the Sleep Timer


You can select a time after which the set goes automatically into standby mode. Press button  repeatedly until the desired time is displayed on the screen (30, 60, 90 minutes or 0 for cancelling the request).

Other functions

How to	Action	The resume normal picture/sound
Display the programme number.	Press  .	Press  again.
Mute the sound.	Press  .	Press  again.
Request the time (only if teletext is available).	Press  .	Press  again.

1-4. TELETEXT OPERATION (KV-M2151U/M2151L ONLY)

TV stations broadcast teletext programmes via the TV channels. To receive teletext programmes, use the buttons indicated in green on the full function side of the Remote Commander. With the simple side of the Remote Commander only the basic operation is possible.

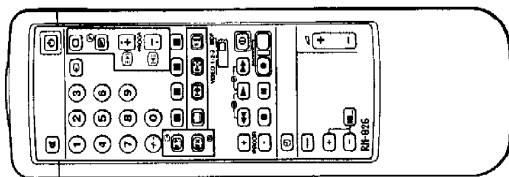

How to view the teletext	
Action	Result
1 Select the channel which carries the teletext service you wish to view.	The channel changes on the screen.
2 Press . The teletext service appears if the teletext signal is not broadcast. P100 is displayed.	
3 Input three digits for the page number using the number buttons. Note If you make a mistake, type in any three digits, then re-enter the correct page number.	The numbers are entered on the screen. The requested page will appear in a few seconds.
To return to the TV mode: Press . To change the teletext channels: First press to return to TV mode, then repeat steps 1 to 3.	

Note
If the signal of the TV channel is weak, teletext errors may often occur.
The has no function on this set.

How to use the Advanced Features of Teletext	
How	Action
Request the index page.	Press (INDEX)
Access the next or preceding page.	Press (PAGE →) or (PAGE ←).
	Result (on-screen display) The index page appears. The next or preceding page appears.

How to	Action	Result
Superimpose the teletext display on the TV programme	Press once if you are in text mode or press twice if in TV mode. To return to the normal teletext display, press again.	The teletext displays are superimposed on the TV programmes.
Prevent a teletext page from being updated or changed.	Press (HOLD)	The HOLD symbol appears on the screen and the chosen sub-page is held until you cancel.
Enlarge the teletext display.	Press once to enlarge the upper half. Press twice to enlarge the lower half. Press again to restore the normal display.	The upper half is enlarged.
Revealed concealed information (e.g. answers to a quiz).	Press (REVEAL). Press again to conceal the information	The information is revealed.
Watch the TV programme while waiting for a requested page to be displayed.	1. Request the new page. 2. Press (TEXT CL)	The numbers are entered. The TV programme is displayed and the requested page number and other teletext data appear at the top of the screen
	3. When the requested page has been captured, the page number remains and the other data disappears.	
	4. Press to view this page.	The requested page is displayed.

Some of the features may not be available depending on the Teletext service.


How to use the FASTEXT feature	
FASTEXT feature allows you to access pages quickly with one key operation. When a FASTEXT page is broadcast, a colour coded menu appears at the bottom of the screen. Each coloured prompt corresponds to the coloured buttons on either side of your Remote Commander.	
Operation	
Action	Result
Press on the coloured buttons which corresponds to the coloured prompt on the teletext.	The selected teletext page appears.

Note
Correct FASTEXT operation depends on the necessary signals sent from the TV station.


1-7. ADDITIONAL INFORMATION

Parts Identification

A

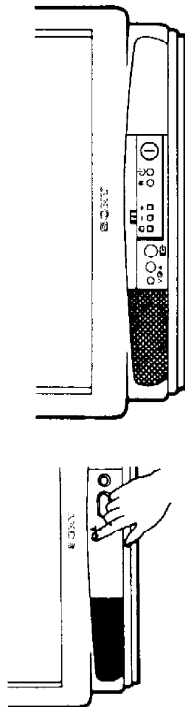

B

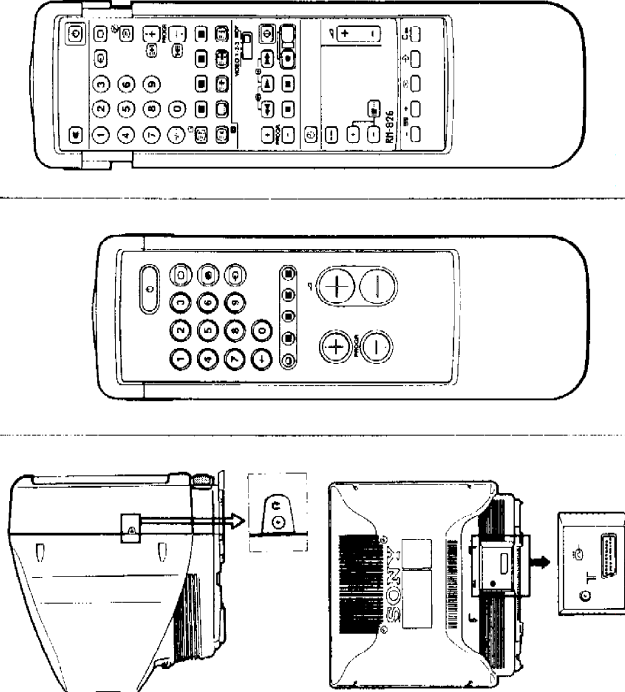

D












This section briefly describes the buttons and controls on the TV set and on the Remote Commander. For more information,

A TV set – Front	
Sign	Name
	Main power switch
	Standby indicator
	Input selects Video/Audio/S-Video
	Function selector Programme/ volume/input
	Adjustment buttons for function selector
B TV set – Rear	
Sign	Name
	Headphones jack
	21-pin Euro-AV connector (RGB/ video input, TV output)
	Aerial terminal (IEC type)
C Remote Commander – simple side	
Sign	Name
	Input mode selector
	Teletext button
	Fastest buttons
	TV mode selector
	Standby button
	Number buttons
	Double-digit entering button
	Volume control buttons
	Programme selector

D Remote Commander – full function side	
Sign	Name
	Mute on/off button
	Standby button
	Number buttons 1, 2, 3, 4, 5, 6, 7, 8, 9, and 0
	Input mode selector
	TV power on/TV mode selector button
	Teletext button
	Double-digit entering button
	Request time display
	Teletext operation buttons
	Fastest buttons
	On-screen display button
	Sleep timer
	Picture adjustment reset button
	Volume control
	Programme selector
	Picture controls
	Video equipment selector
	Video equipment operation buttons
	Programme number- clear button
	Channel preset/store button
	Tuning buttons


Troubleshooting

Here are some simple solutions to the problems which may affect the picture and sound.


Problem	Checking and solution
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Connect the set to a working outlet. • Press the power switch . • If the standby indicator shines red, press the TV button on the Commander C. • Check the aerial connection.
Poor or no picture (screen not lit), but sound good	<ul style="list-style-type: none"> • Adjust , , and  by pressing the + or - button after selecting with the  button.
Good picture but no sound	<ul style="list-style-type: none"> • Press . • If  is displayed on the screen, press  on the Remote Commander.
No colour for colour programmes	<ul style="list-style-type: none"> • Adjust  with the + button after selecting with the  button. • Press .
Snow and noise	<ul style="list-style-type: none"> • Check the aerial connections.

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

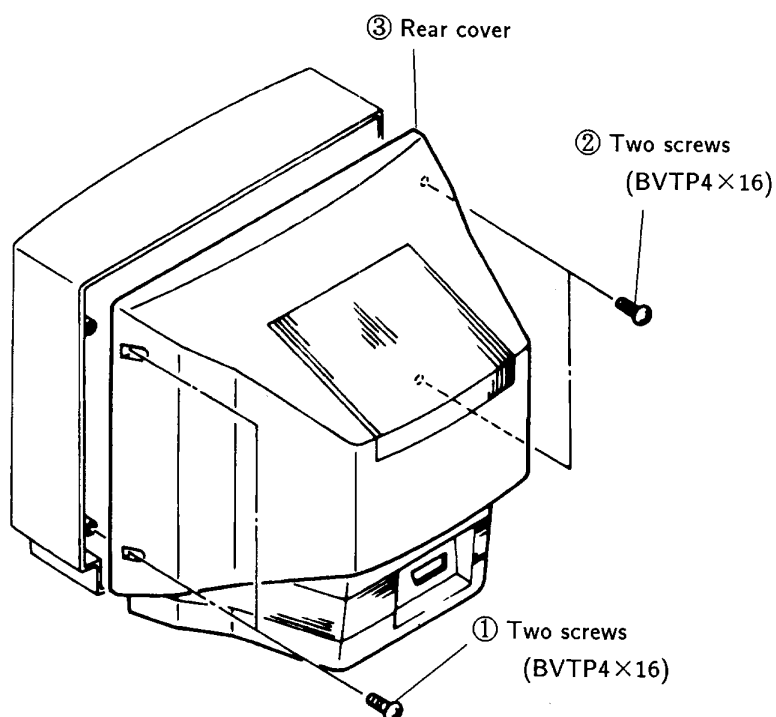


2-2. SERVICE POSITION

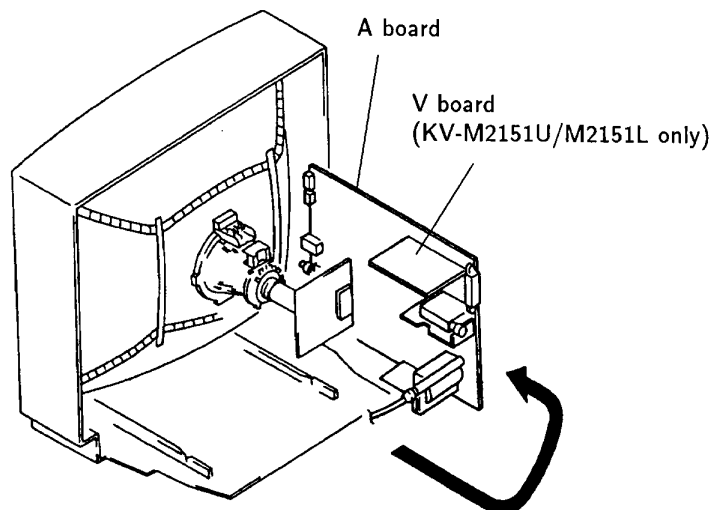

2-3. V BOARD REMOVAL (KV-M2151U /M2151L only)

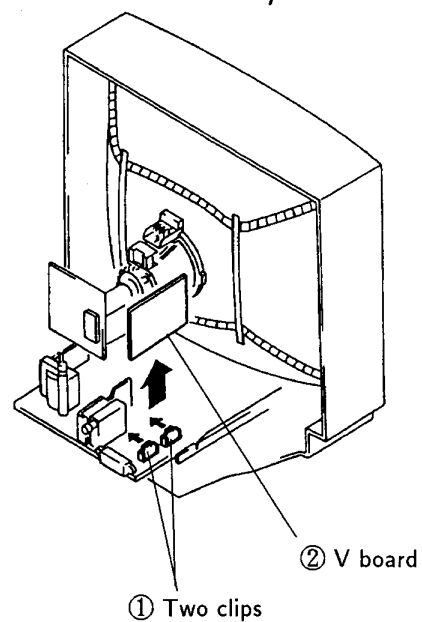


2-4. PICTURE TUBE REMOVAL

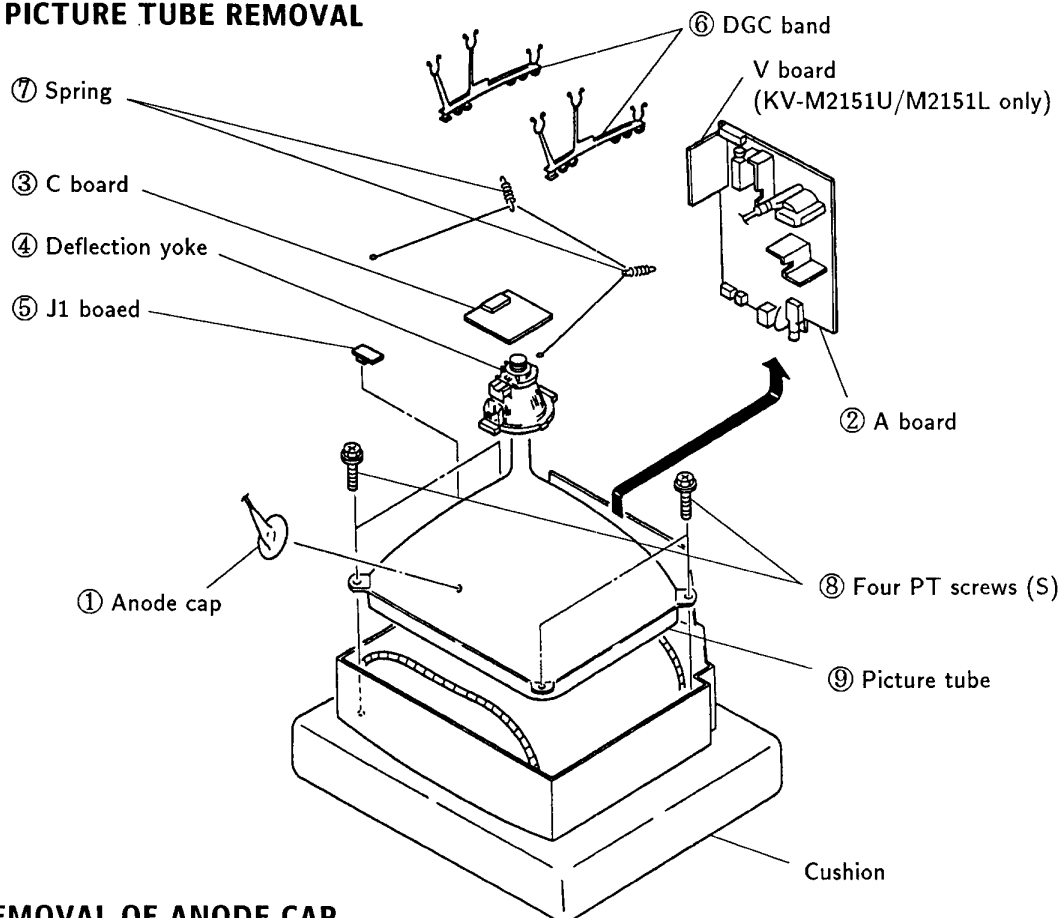

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

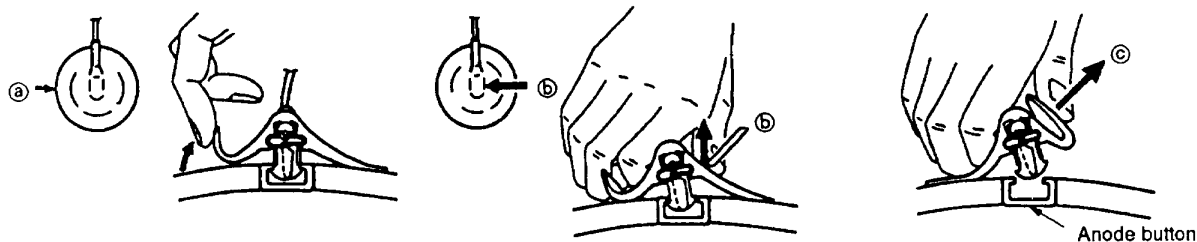


① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

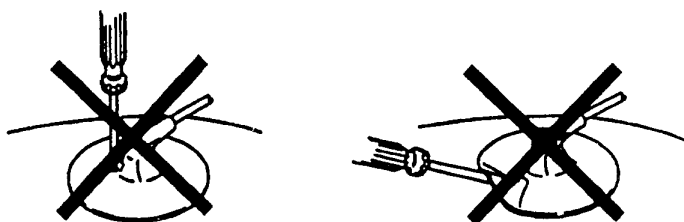

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted. The controls and switch below should be set as follows unless otherwise noted :

● CONTRAST control..... 80%(or Normal by commander)

⚙ BRIGHTNESS control..... 50%

Perform the adjustments in order as follows:

Preparation:

- Set the side of the unit with the PICTURE TUBE so that it faces east or west in order to reduce the influence of external magnetic force.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser..

3-1. BEAM LANDING

Demagnetize with a degausser

1. Input a raster signal with the pattern generator.

CONTRAST }
 BRIGHTNESS } normal
2. Turn the raster signal of the pattern generator to red.
3. Move the deflection yoke backward, and adjust with the purity control so that red is in the center and blue and green are at the sides evenly. (Fig.3-1 - 3-3)
4. Move the deflection yoke forward, and adjust so that the entire screen becomes red. (Fig.3-1)
5. Switch over the raster signal to blue and green confirm the condition.
6. When the position of the deflection yoke is determined, tighten it with a deflection yoke mounting screw.
7. When landing at the corner is not right, adjust by using the disk magnets. (Fig.3-4)

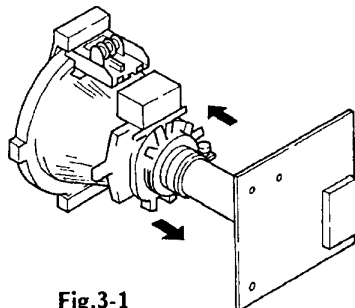


Fig.3-1

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G 2) and White Balance

Note: Test Equipment Required.

1. Color bar/Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter
5. Oscilloscope

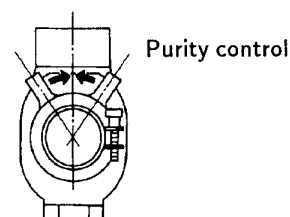


Fig.3-2

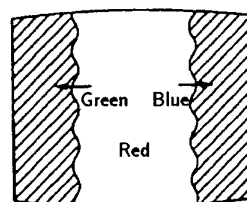


Fig.3-3

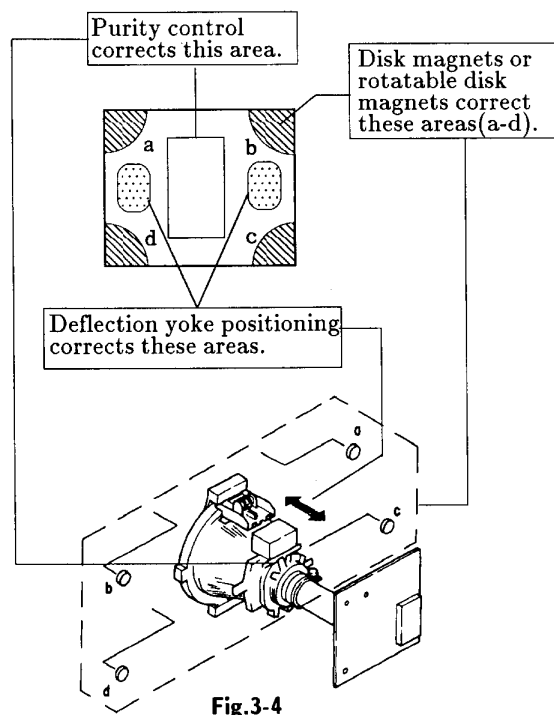



Fig.3-4

3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H.SIZE, and V. SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in the dot pattern.


(1) Horizontal and Vertical Static Convergence

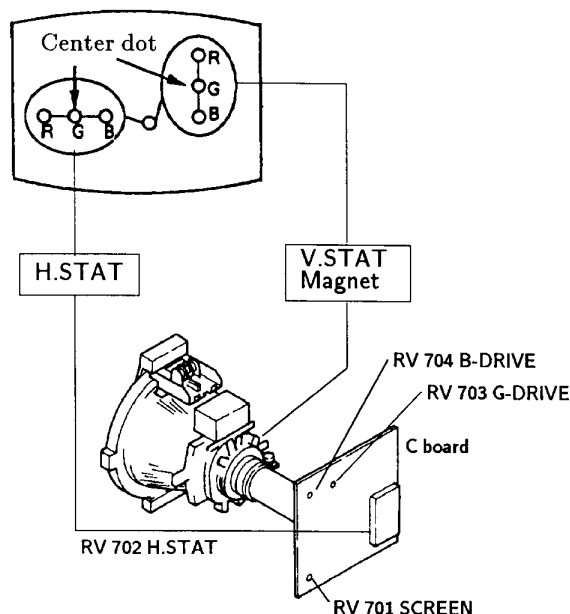

1. Adjust H.STAT VR to converge red, green and blue dots the in center of the screen.(Horizontal movement)
 2. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement)
 3. If the red, green and blue dots do not converge on the center of screen with H.STAT VR, perform horizontal convergence adjustment using H.STAT VR and V.STAT magnet as shown below. (In this case, H.STAT VR and V.STAT magnet effect each other.)
- Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

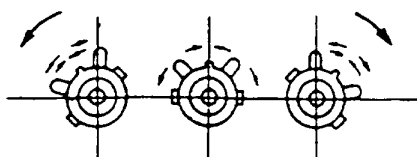

4. When the V.STAT magnet is moved in the direction of arrow ㉑ and ㉒, red, green and blue dots move as shown below.

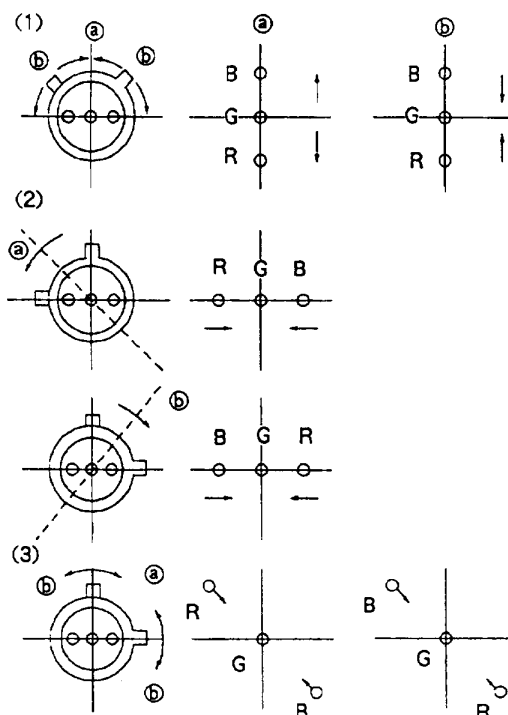


If the red and blue dot do not converge with green dots, perform following steps.

Move BMC magnet (a) to correct insufficient H.static convergence.

Rotate BMC magnet (b) to correct insufficient V.static convergence.

In either case, repeat Beam Landing Adjustment.

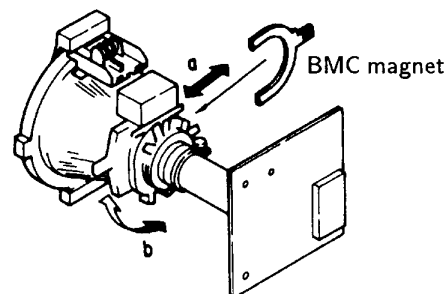

(2) Dynamic Convergence Adjustment

Preparation:


- Before starting perform Horizontal and Vertical static convergence Adjustment.

1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.



3. Move the deflection yoke for best convergence as shown below.

4. Tighten the deflection yoke screw.

5. Install the deflection yoke spacers.

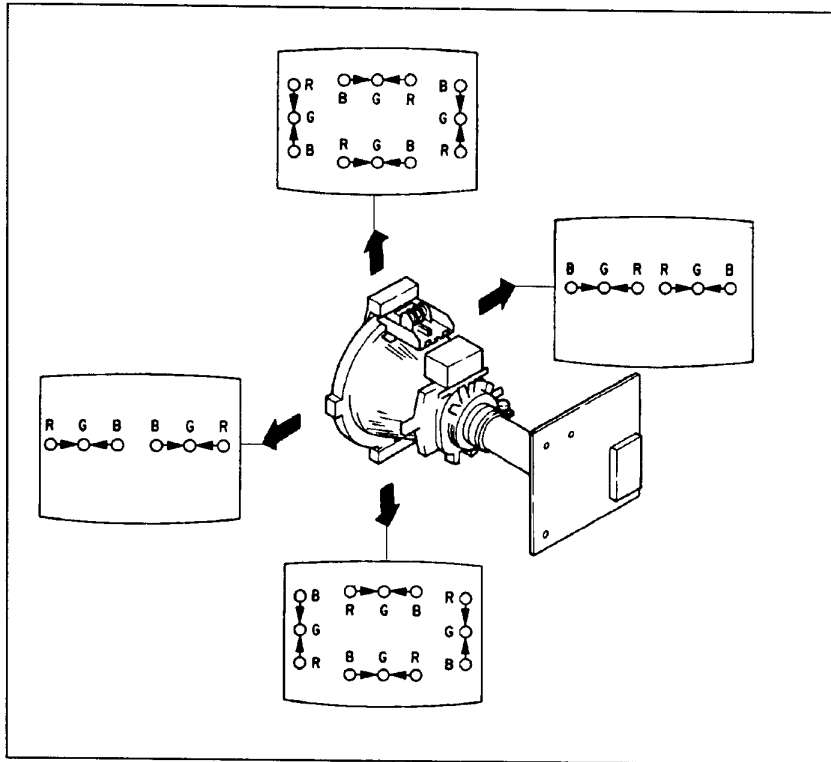


(3) Screen-corner Convergence

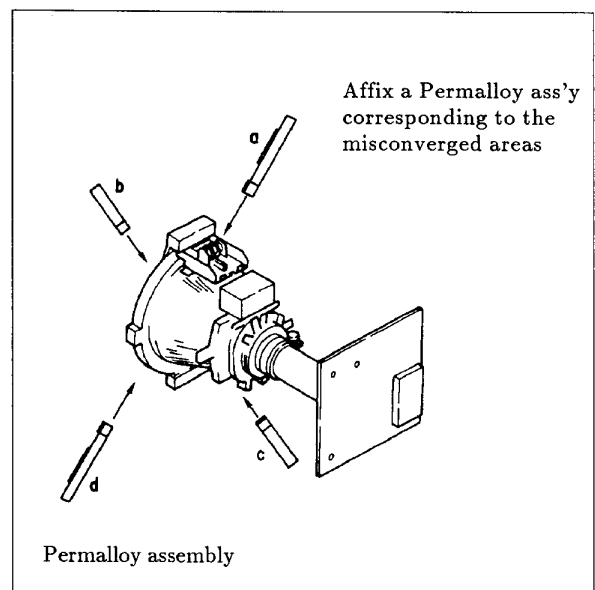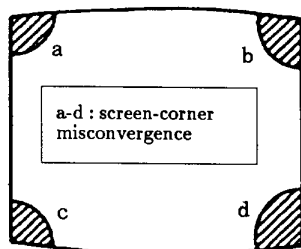

3-3. FOCUS

Adjust FOCUS so that the whole screen is in best focus.

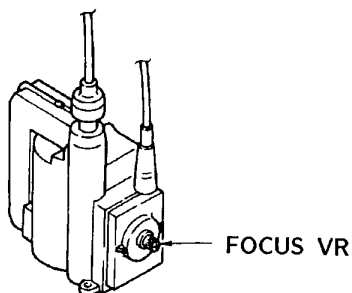


White Balance Adjustment

1. Input all-white signal from the pattern generator.
2. Adjust the BRIGHTNESS and COLOR controls to the standard level.
3. Adjust the following using RV 704 (B DRIVE) and RV 703 (G DRIVE)

In the following adjustments, the CONTRAST, COLOR and BRIGHTNESS controls are set to normal unless otherwise specified.

3-4. SCREEN (G 2) and WHITE BALANCE

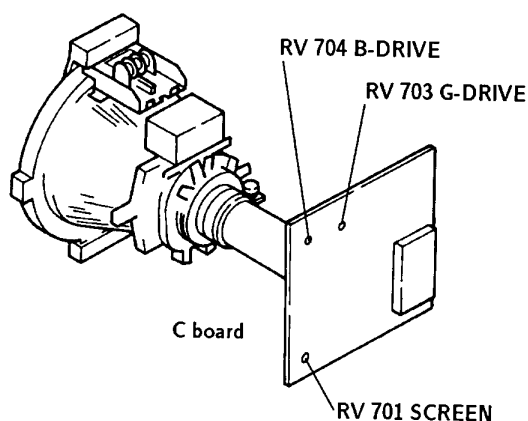


Screen (G 2) Setting

1. Input dot signal from the pattern generator.
2. Set the picture BRIGHTNESS control to minimum level.
3. Apply 170 V DC to the cathodes of R,G and B from an external power source.
4. While watching the picture, adjust the G2 control RV701 (SCREEN) immediately before fly-back line disappears.

SECTION 4

CIRCUIT ADJUSTMENTS

4-1. A BOARD ADJUSTMENTS



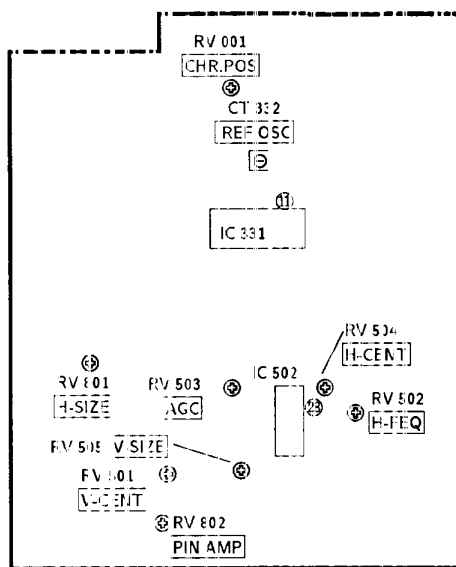


A BOARD


-Component side-

TU AGC Adjustment (RV 503)

1. Tune in air signal.
2. Adjust AGC VR (RV 503) so that snow-noise and cross-modulation just disappear from the picture.

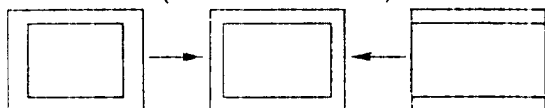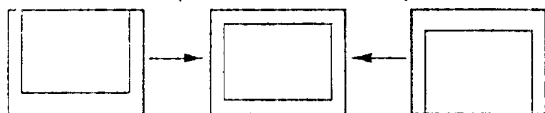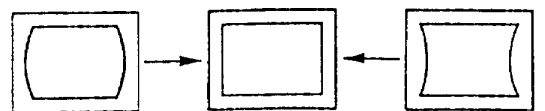RV 504 H.CENT (HORIZONTAL CENTER)RV 801 H.SIZE (HORIZONTAL SIZE)RV 501 V.CENT (VERTICAL CENTER)RV 505 V.SIZE (VERTICAL SIZE)RV 802 PIN AMP (PINCUSHION AMPLIFIER)H.FREQ Adjustment (RV 502)


1. Input a PAL COLOR BAR signal, then connect an electrolytic capacitor (100 μ /16 V) between pin ② and GND of IC 502.
2. Adjust RV 502 (H.FREQ) to stop scrolling of the picture in the horizontal direction.
3. After adjustment, remove the electrolytic capacitor.

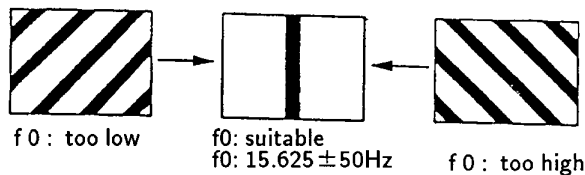REF OSC 8.8 MHz Adjustment (CT 332)


1. Input a PAL COLOR BAR pattern.
2. Short circuit between pin ⑪ of IC 331 and ground.
3. Adjust CT 332 to obtain color synchronization.
4. Remove the jumper wire from IC 331.

CHARACTER POSITION Adjustment (RV 001)

1. Input PAL COLOR BAR pattern.
2. Adjust RV 001 to position the character display at the point indicated by the arrow below.

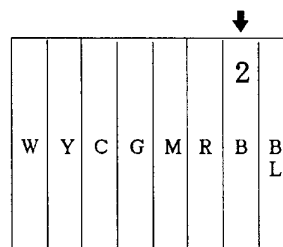


4-2. V BOARD ADJUSTMENT (KV-M2151U/M2151L only)

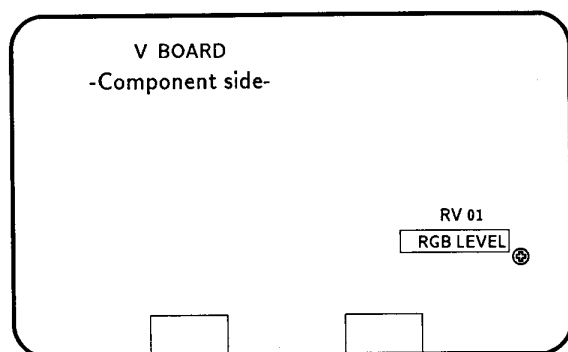


RGB LEVEL Adjustment (RV 01)

1. Set PICTURE to maximum.
2. Adjust RV01 till the RGB output becomes maximum.

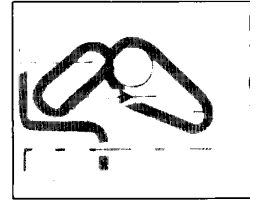SECTION 5
DIAGRAMS

5-1. CIRCUIT BOARDS LOCATION

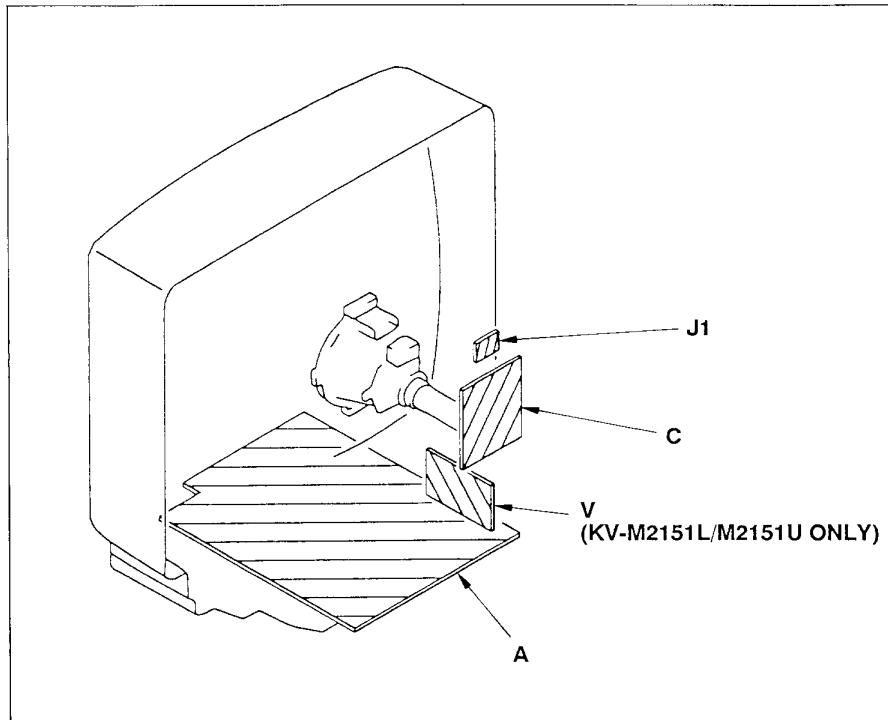

5-2. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{K}\Omega$
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm

Rating electrical power $\frac{1}{4}$ W

- : nonflammable resistor.
- : internal component.
- : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- : no mounted.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.


Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
COIL	: RW	NONFLAMMABLE WIREWOUND
	: ※	ADJUSTMENT RESISTOR
	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


- Reading : use before with a short bar signal input
- Readings are taken with a 10M Ω digital multimeter
- Voltage are vs with respect to ground unless otherwise noted
- Voltage variations may be noted due to normal production tolerances
- All voltages are at V.
- Circled numbers are wave form frequency
- : 0.1 ms.
- : signal path (RF)

5-3. SEMICONDUCTORS

KEY-C00SV-F

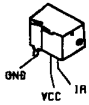

STR54041

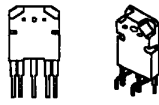


μPC574J




0TA114EK
 0TA143EK
 0TA143TK
 0TA144EK
 0TC114EK
 0TC124EK
 0TC144EK
 MMST2907A
 2SA1037K
 2SA1162-G
 2SB1295-UL6
 2SC1623-L5L6
 2SC2412K
 2SC2712G
 2SC2712-YG


L78LR05D-MA

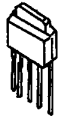


T0A3505-V1
 FCB61C65L-70P

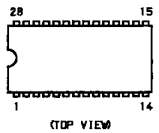


BC637-16

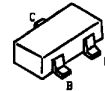


M5F78M12L

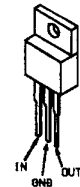

T0A3827-V3
 T0A7245

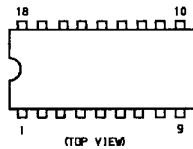

BF871




2SA1091-O



PCA84C840P-011




T0A4510/V8
 T0A4660V2

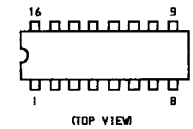


BF959-AMMO




2SC2410SN

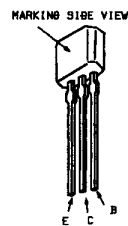


RC4558P
 ST24C02AB1
 ST24C02CP

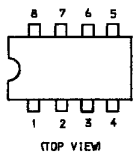


T0A8304

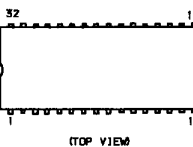


BU508AS2




2SC2688-LK

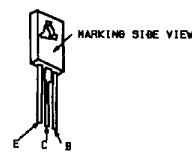

SAA5246P/E

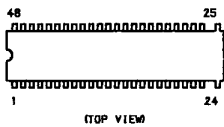

μPC1488H

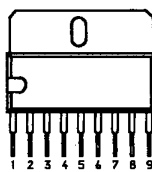


2SD1408-Y




2SØ2096-EF




ERC06-15S

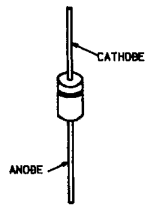


MA3051
MA3056M
MA3068M
RØ5.1M-B2
RØ5.6M-B2
RØ6.8M-B2




ØAN202K
MA152WK

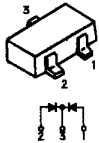


ERØ28-06S
ERØ28-03S
RGP02-17
RGP10G
RU-3AM
R2K




SPR-54MVW

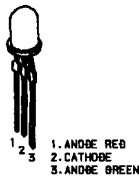


ØAP202K

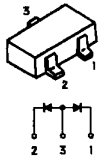


GP08Ø
U05G




ØA204K
1S5226




KBU4JL-6088
RBV-406H-01

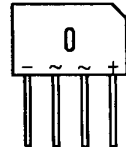


ERA83-006
RØ5.1ES-B2
RØ5.6ES-B2
RØ6.8ES-B2
RØ7.5ES-B2
RØ8.2ES-B2
1S5119
1S5133

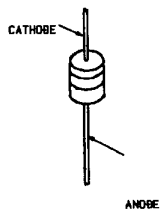

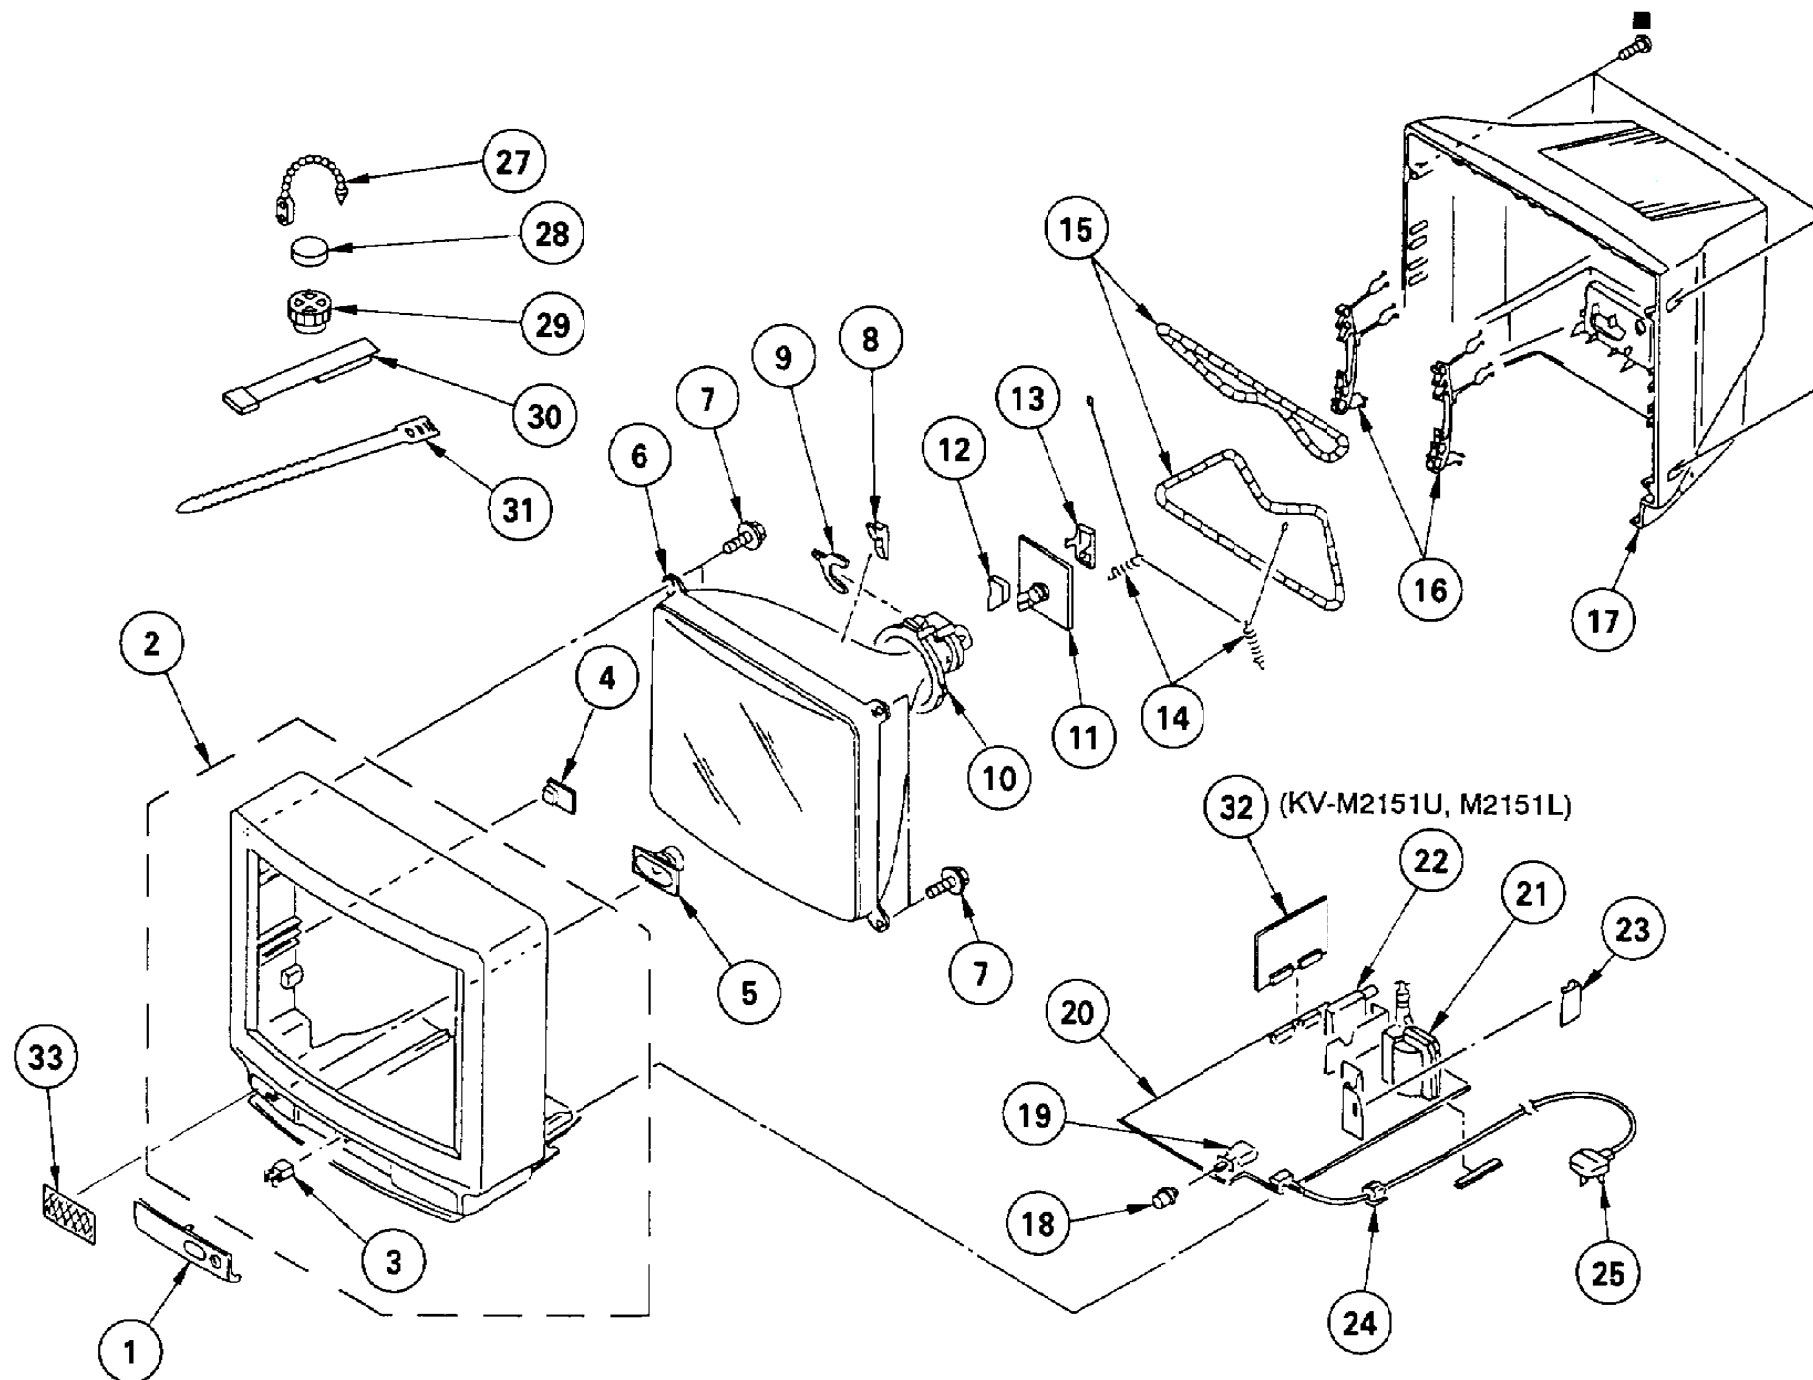

5-1. CIRCUIT BOARD LOCATION

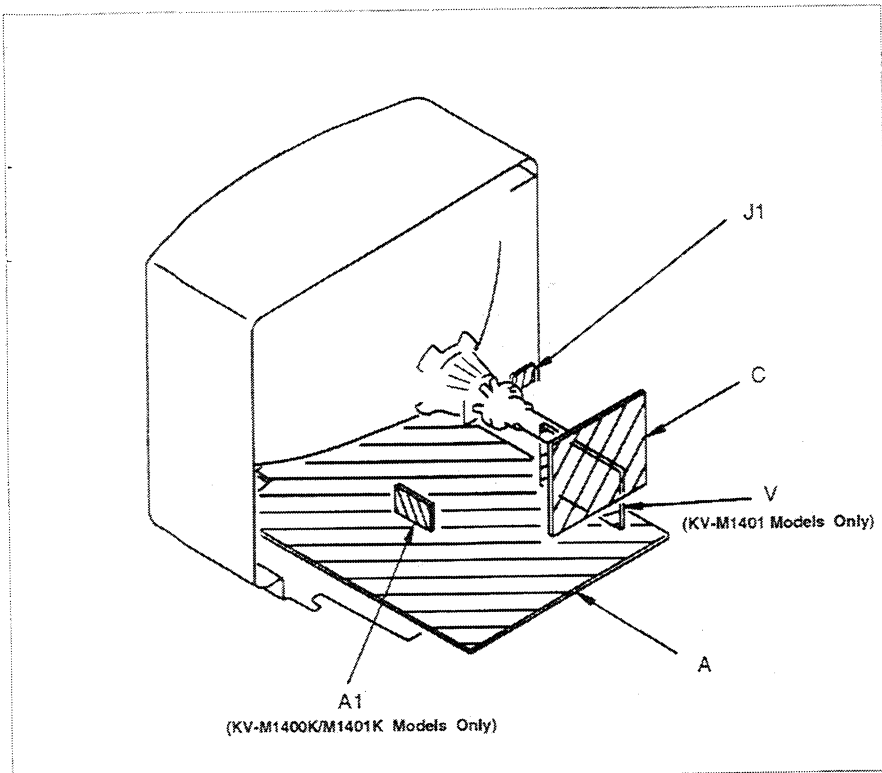

Note :

- All capacitors are in μF unless otherwise noted. pF : μF
50WV or less are not indicated except for electrolytic and tantalums.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5 mm
Rating electrical power $\frac{1}{4}$ W

- : nonflammable resistor.
- : internal component.
- : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth - ground.
- : earth - chassis.
- : no mounted.

Note : The components identified by shading and marked are critical for safety. Replace only with part number specified.

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	:	ADJUSTABLE RESISTOR
	: LF-8L	MICRO INDUCTOR
	: TA	TANTALUM
COIL	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE
CAPACITOR		


- Readings are taken with a colour-bar signal input
- Readings are taken with 10M Ω digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- Circled numbers are waveform references.
- : B+ bus.
- : signal path (RF)

5-2. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS.

— A Board —

A Board


DIODE		DIODE		TRANSISTOR	
D002	E-10	D604	E-4	Q001	D-8
D004	C-9	D605	E-6	Q003	C-9
D007	B-8	D606	D-5	Q004	D-10
D008	D-10	D607	G-5	Q005	B-8
D009	B-8	D608	H-5	Q006	C-8
D011	E-8	D609	G-5	Q007	B-4
D020	B-8	D610	G-5	Q015	D-3
D110	C-5	D611	F-4	Q016	D-10
D301	C-6	D801	G-3	Q017	E-9
D302	A-2	D802	H-4	Q019	D-10
D303	B-6	D803	G-4	Q020	D-8
D305	A-2	D805	G-1	Q104	C-1
D306	B-6	D806	F-1	Q106	A-2
D313	A-3	D807	F-3	Q107	A-2
D321	C-5	D808	E-3	Q112	A-7
D324	A-7	D810	E-1	Q114	B-5
D334	B-6	D811	E-1	Q115	A-6
D402	A-1	D820	F-4	Q123	A-2
D403	B-1			Q141	C-3
D404	B-1	IC		Q302	C-7
D405	A-1	IC001	C-9	Q304	B-6
D406	C-1	IC002	D-9	Q305	B-6
D411	A-1	IC003	D-10	Q307	B-6
D417	D-1	IC004	E-9	Q310	A-3
D418	A-4	IC005	B-8	Q311	A-3
D426	C-1	IC102	B-5	Q401	B-1
D427	C-1	IC201	F-8	Q457	D-1
D450	B-5	IC301	D-5	Q504	C-3
D501	D-3	IC302	B-7	Q505	B-3
D503	E-4	IC331	C-7	Q601	G-5
D504	G-2	IC501	D-2	Q801	F-4
D519	C-8	IC502	C-4	Q802	H-3
D601	F-7	IC601	G-5	Q803	F-3
D602	F-6	IC801	F-3		
D603	F-5	IC802	E-4		
		TRIMMER		VARIABLE RESISTOR	
		CT331	C8	RV001	D-9
		CT332	C8	RV501	D-2
				RV502	B-4
				RV503	C-4
				RV505	D-2
				RV801	F-4

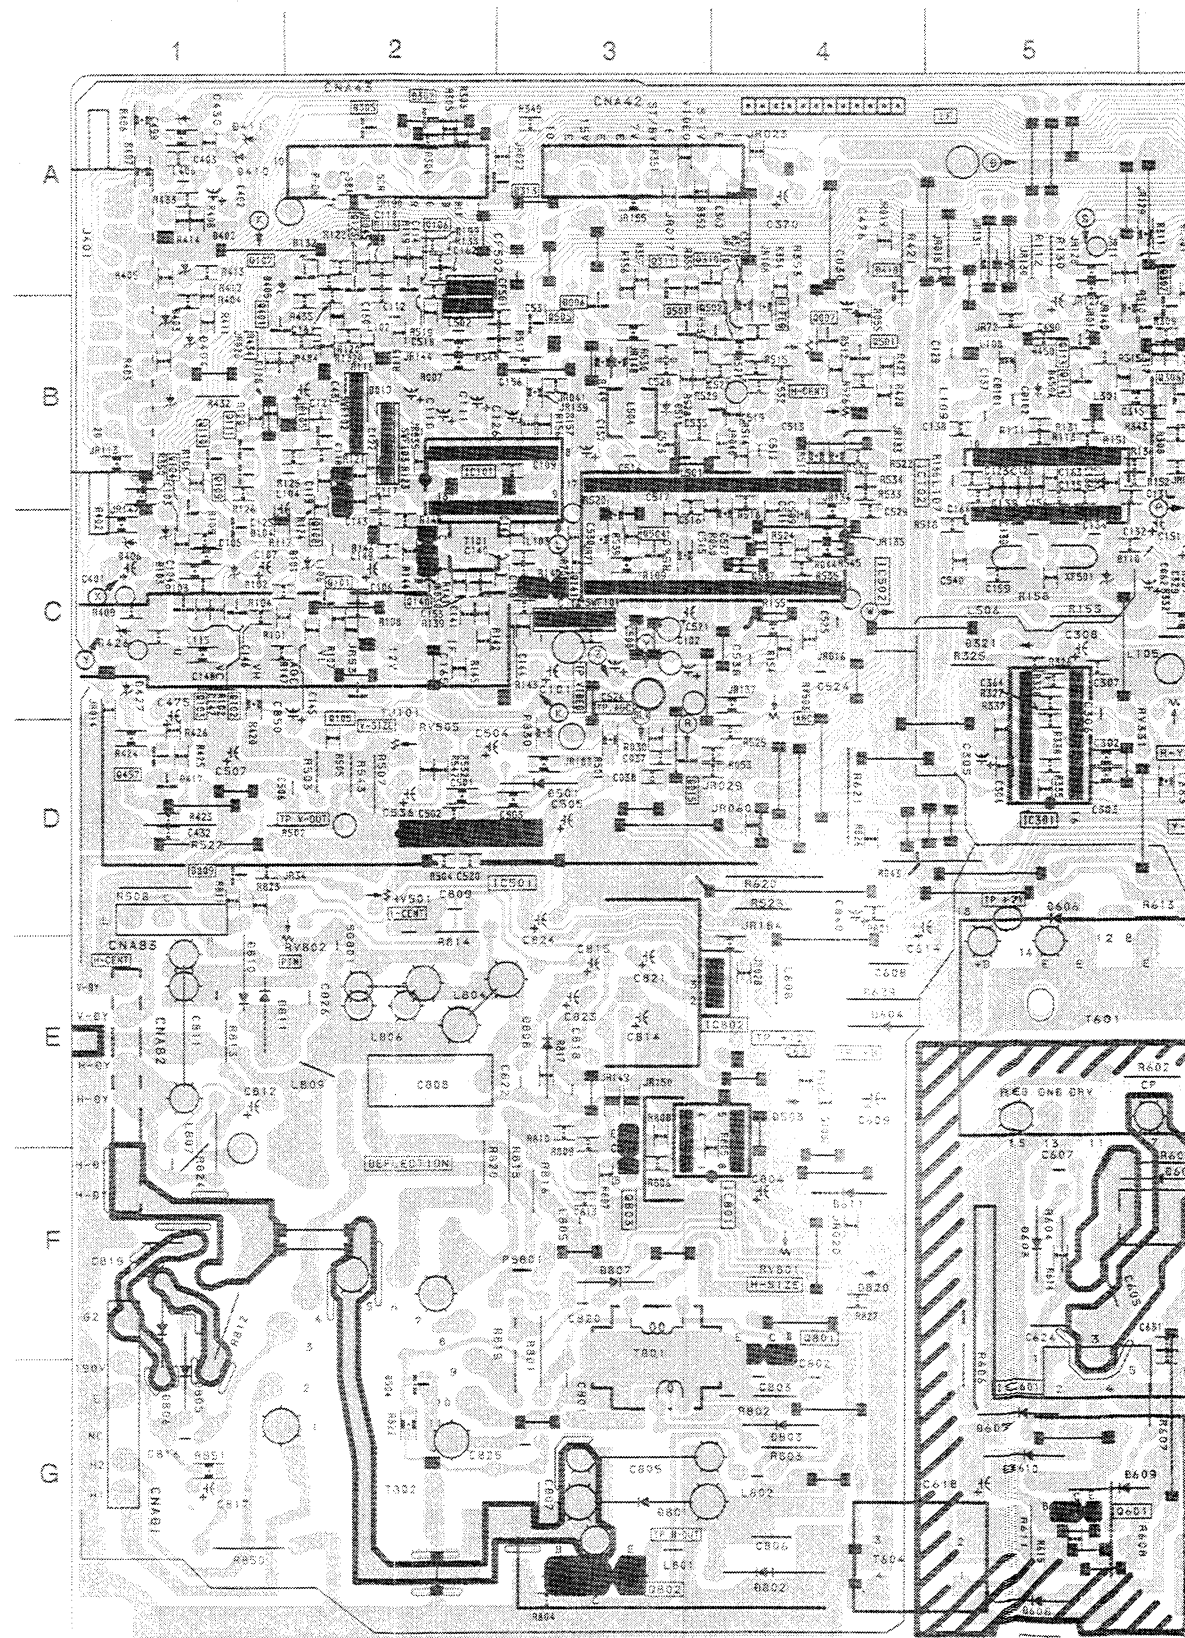

5-2. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS.

— A Board —


A SYSTEM CONTROL
H/V OUT, MEMORY, CHROMA

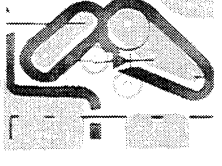


The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.


A Board

DIODE		DIODE		TRANSISTOR	
D002	E-10	D604	E-4	Q001	D-8
D004	C-9	D605	E-6	Q003	C-9
D007	B-8	D606	D-5	Q004	D-10
D008	D-10	D607	G-5	Q005	B-8
D009	B-8	D608	H-5	Q006	C-8
D011	E-8	D609	G-5	Q007	B-4
D020	B-8	D610	G-5	Q015	D-3
D110	C-5	D611	F-4	Q016	D-10
D301	C-6	D801	G-3	Q017	E-9
D302	A-2	D802	H-4	Q019	D-10
D303	B-6	D803	G-4	Q020	D-8
D305	A-2	D805	G-1	Q104	C-1
D306	B-6	D806	F-1	Q106	A-2
D313	A-3	D807	F-3	Q107	A-2
D321	C-5	D808	E-3	Q112	A-7
D324	A-7	D810	E-1	Q114	B-5
D334	B-6	D811	E-1	Q115	A-6
D402	A-1	D820	F-4	Q123	A-2
D403	B-1	IC		Q141	C-3
D404	B-1			Q302	C-7
D405	A-1			Q304	B-6
D406	C-1			Q305	B-6
D411	A-1			Q307	B-6
D417	D-1			Q310	A-3
D418	A-4			Q311	A-3
D426	C-1			Q401	B-1
D427	C-1			Q457	D-1
D450	B-5			Q504	C-3
D501	D-3	IC302	B-7	Q505	B-3
D503	E-4	IC331	C-7	Q601	G-5
D504	G-2	IC501	D-2	Q801	F-4
D519	C-8	IC502	C-4	Q802	H-3
D601	F-7	IC601	G-5	Q803	F-3
D602	F-6	IC801	F-3	VARIABLE RESISTOR	
D603	F-5	IC802	E-4		
		TRIMMER			
		CT331 C8 CT332 C8	RV001 D-9		
			RV501 D-2		
			RV502 B-4		
			RV503 C-4		
			RV505 D-2		
			RV801 F-4		

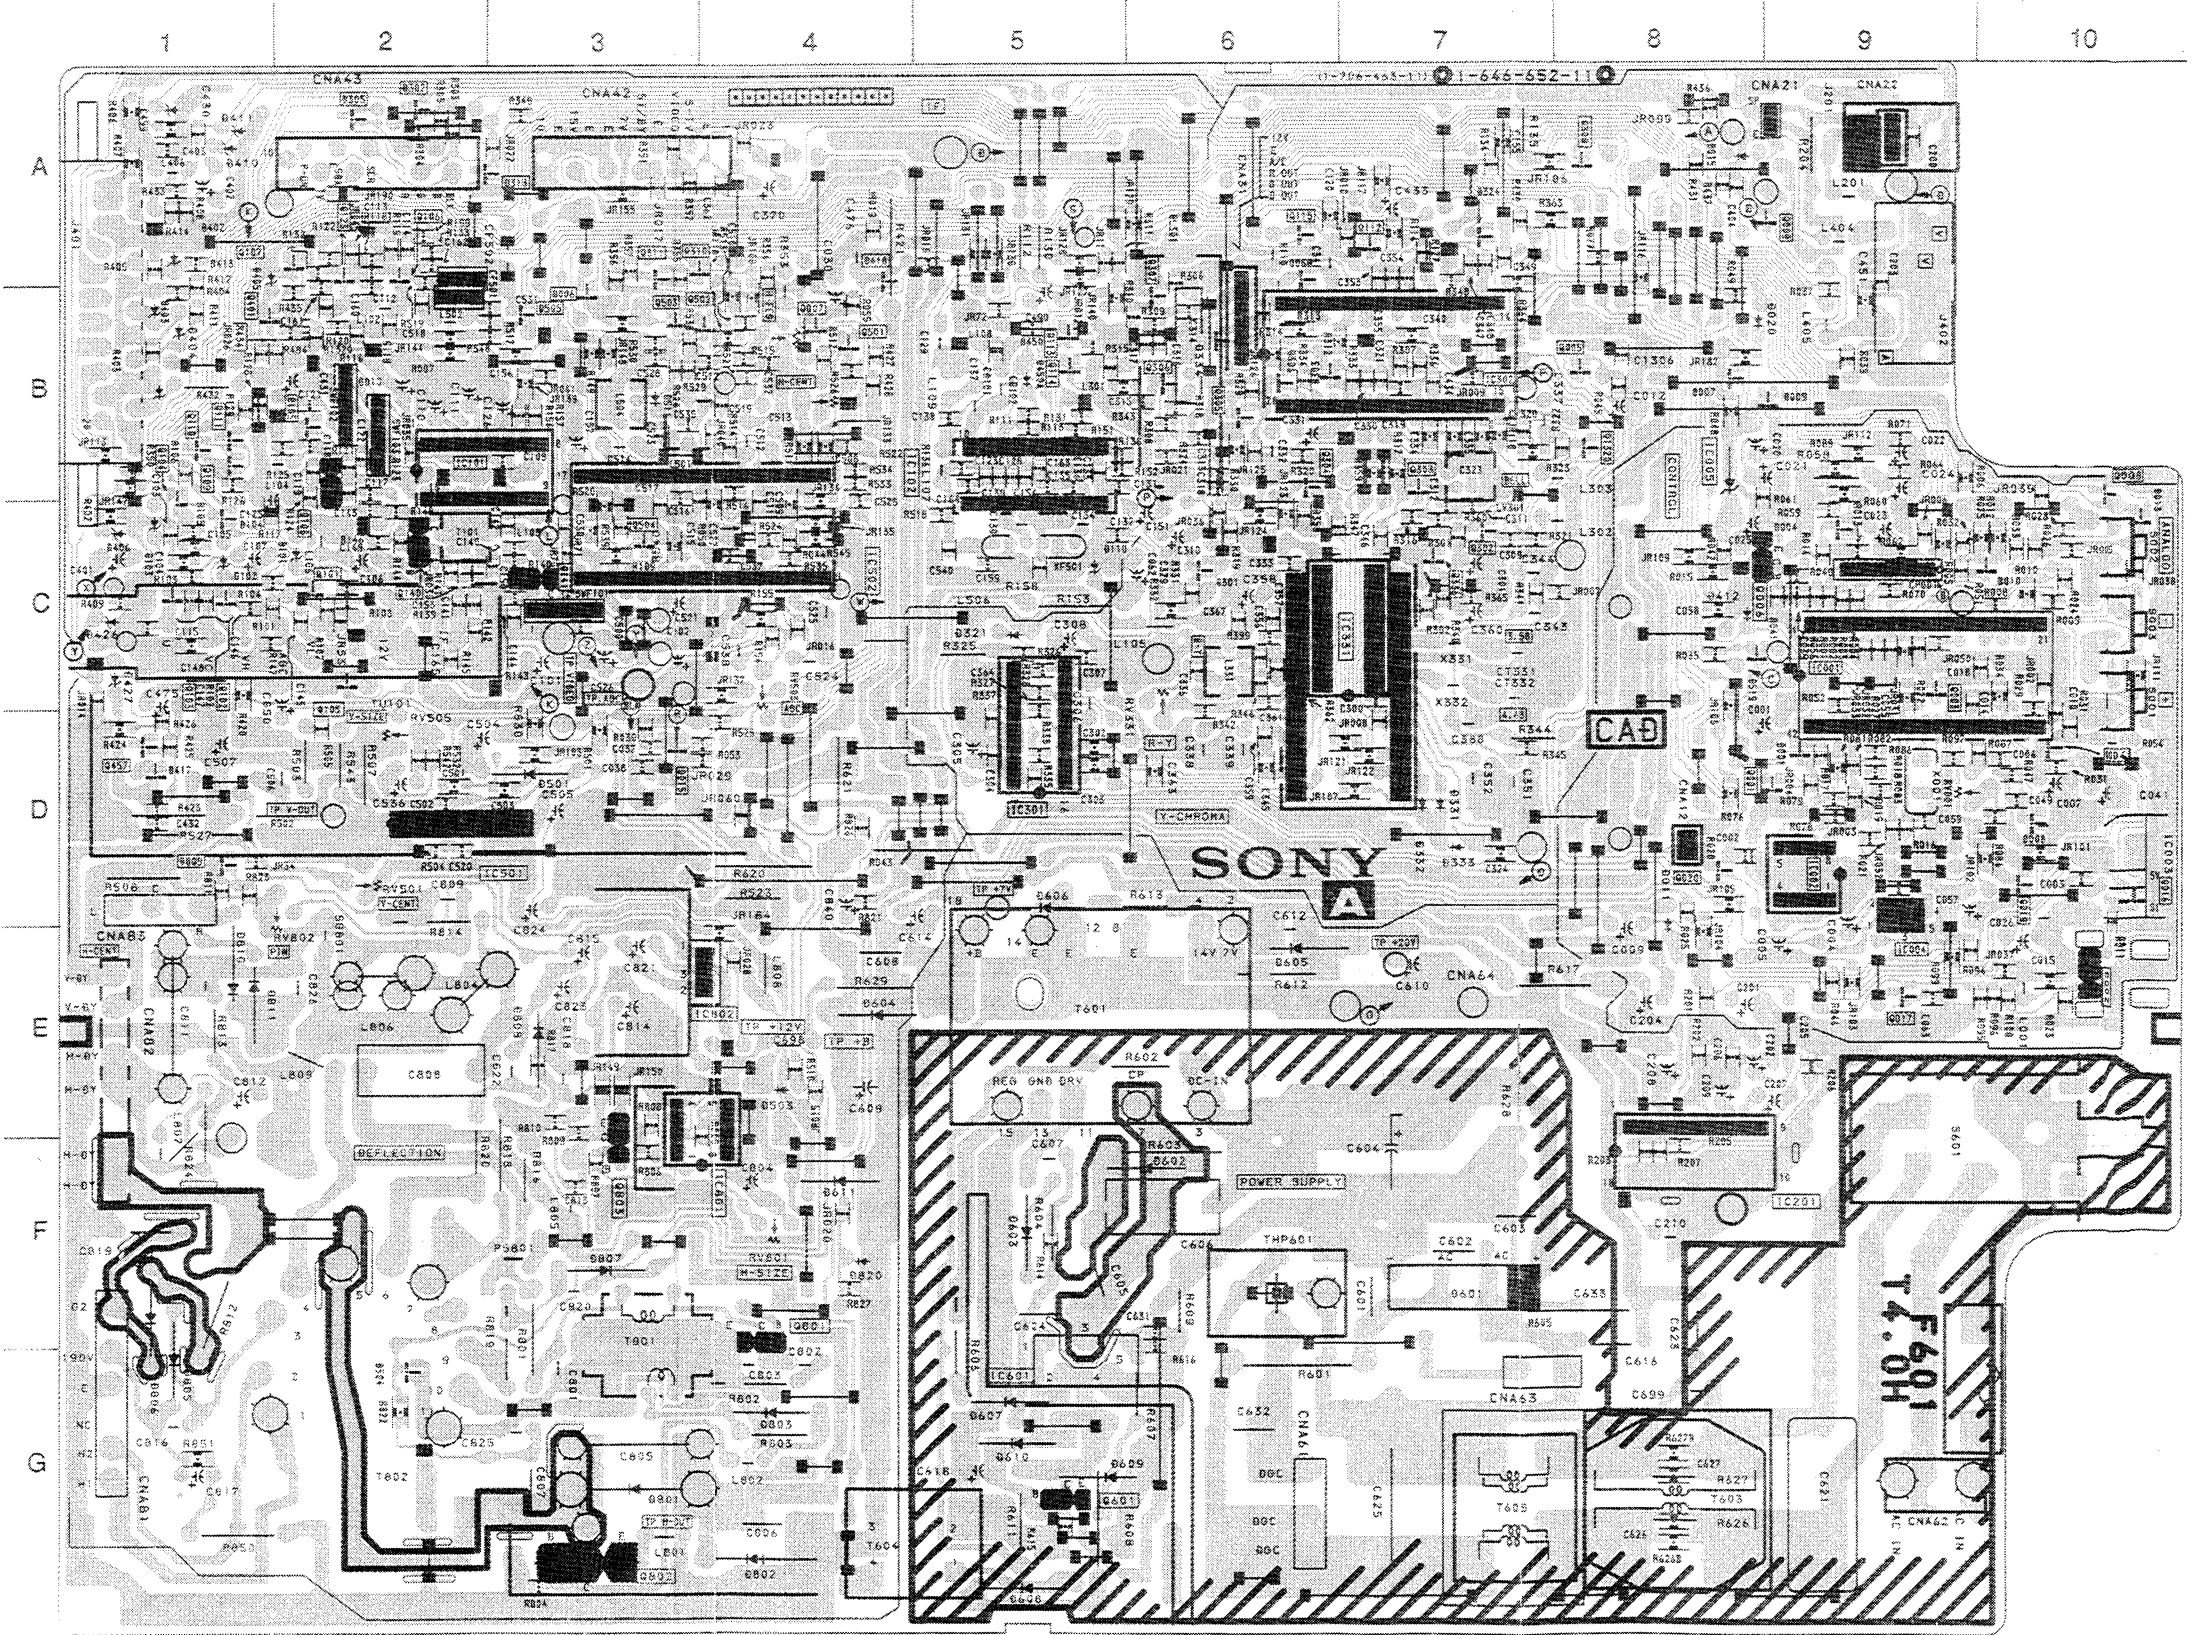


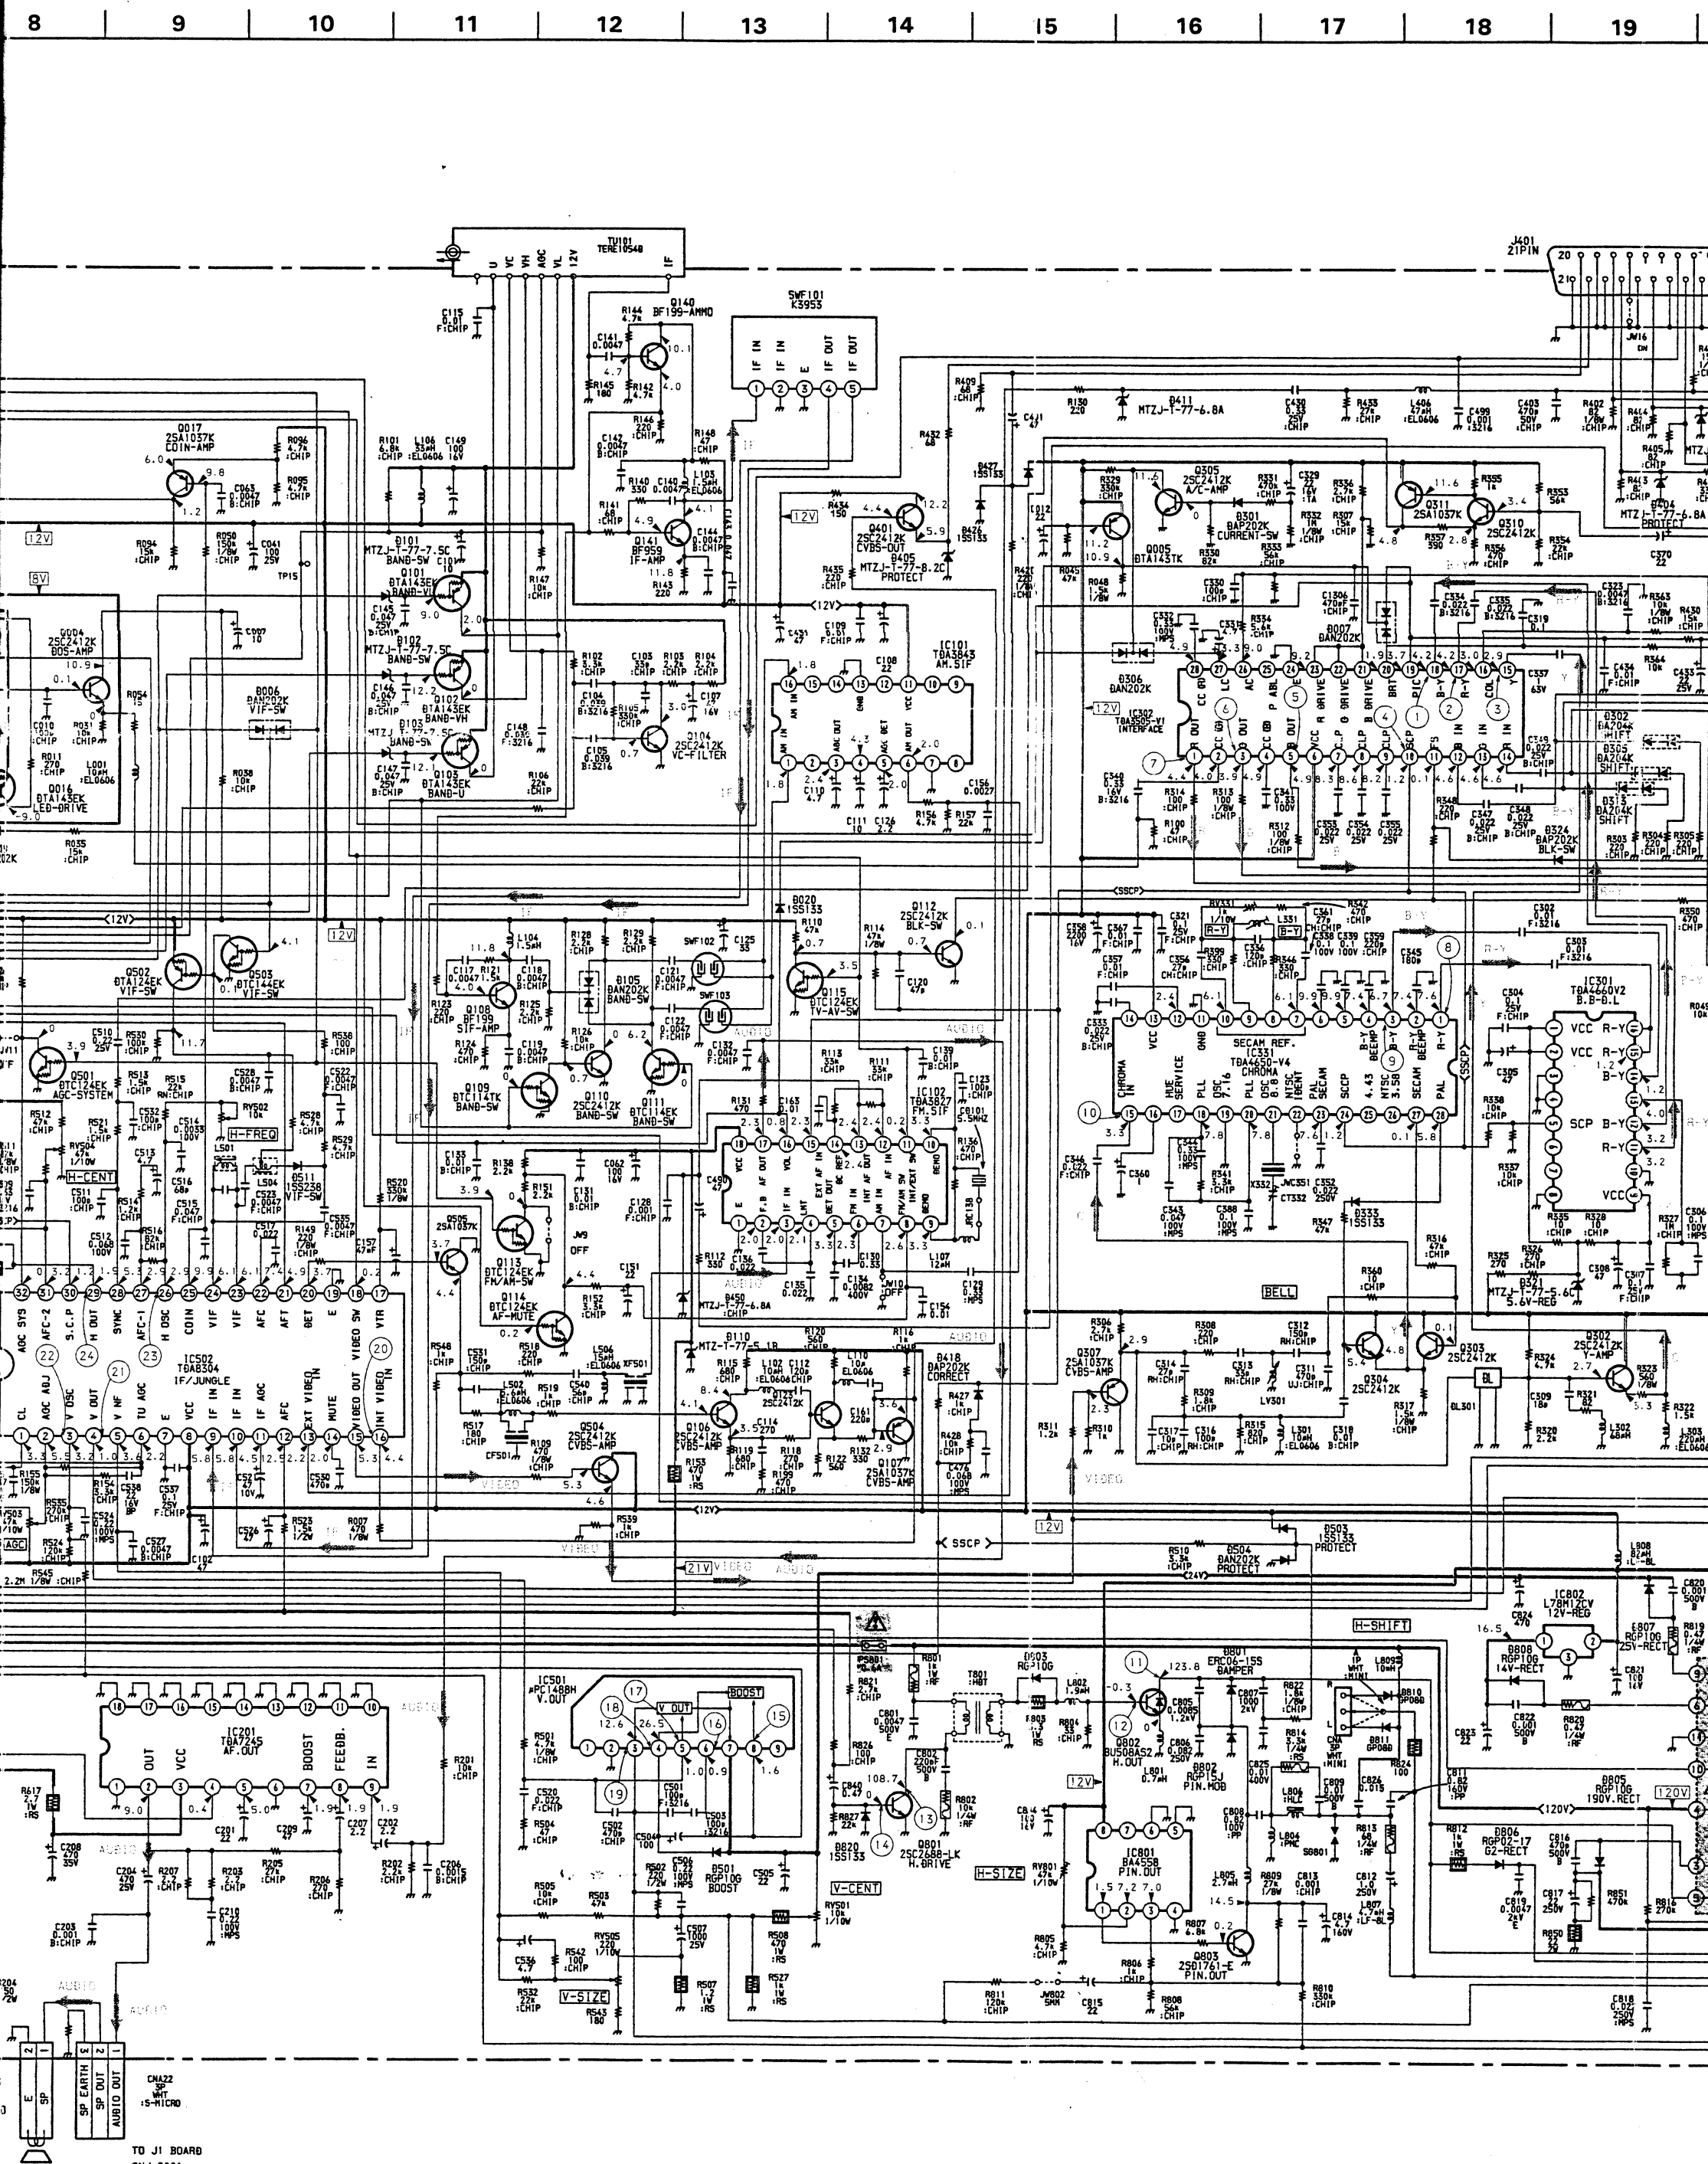



A Board IC302 TDA3505-V1

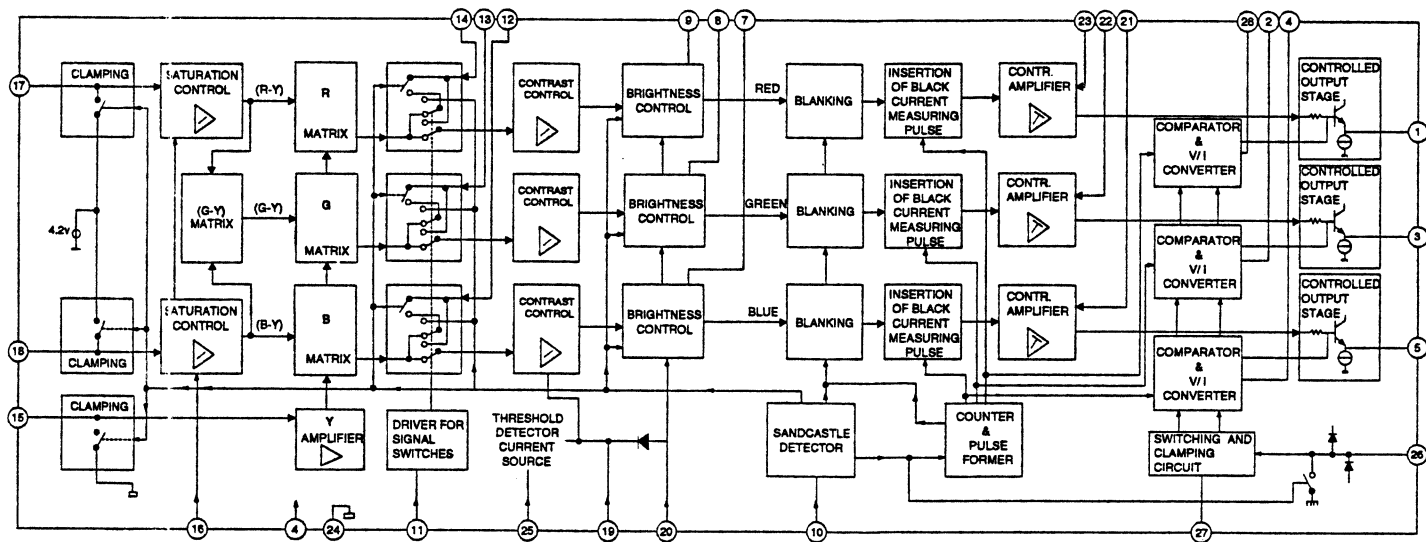



A Board IC331 TDA4650-V4

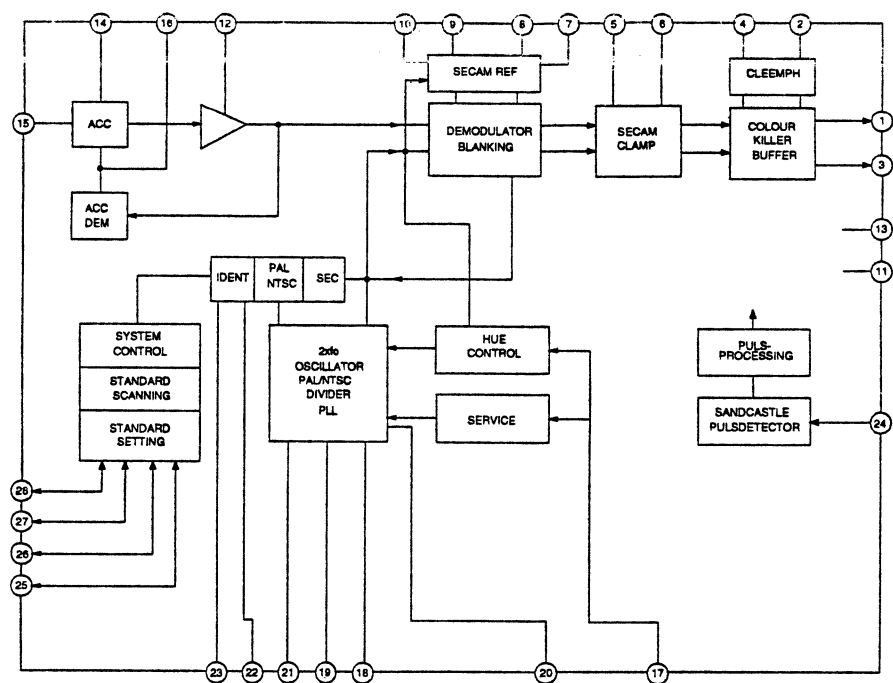


A BOARD WAVEFORMS

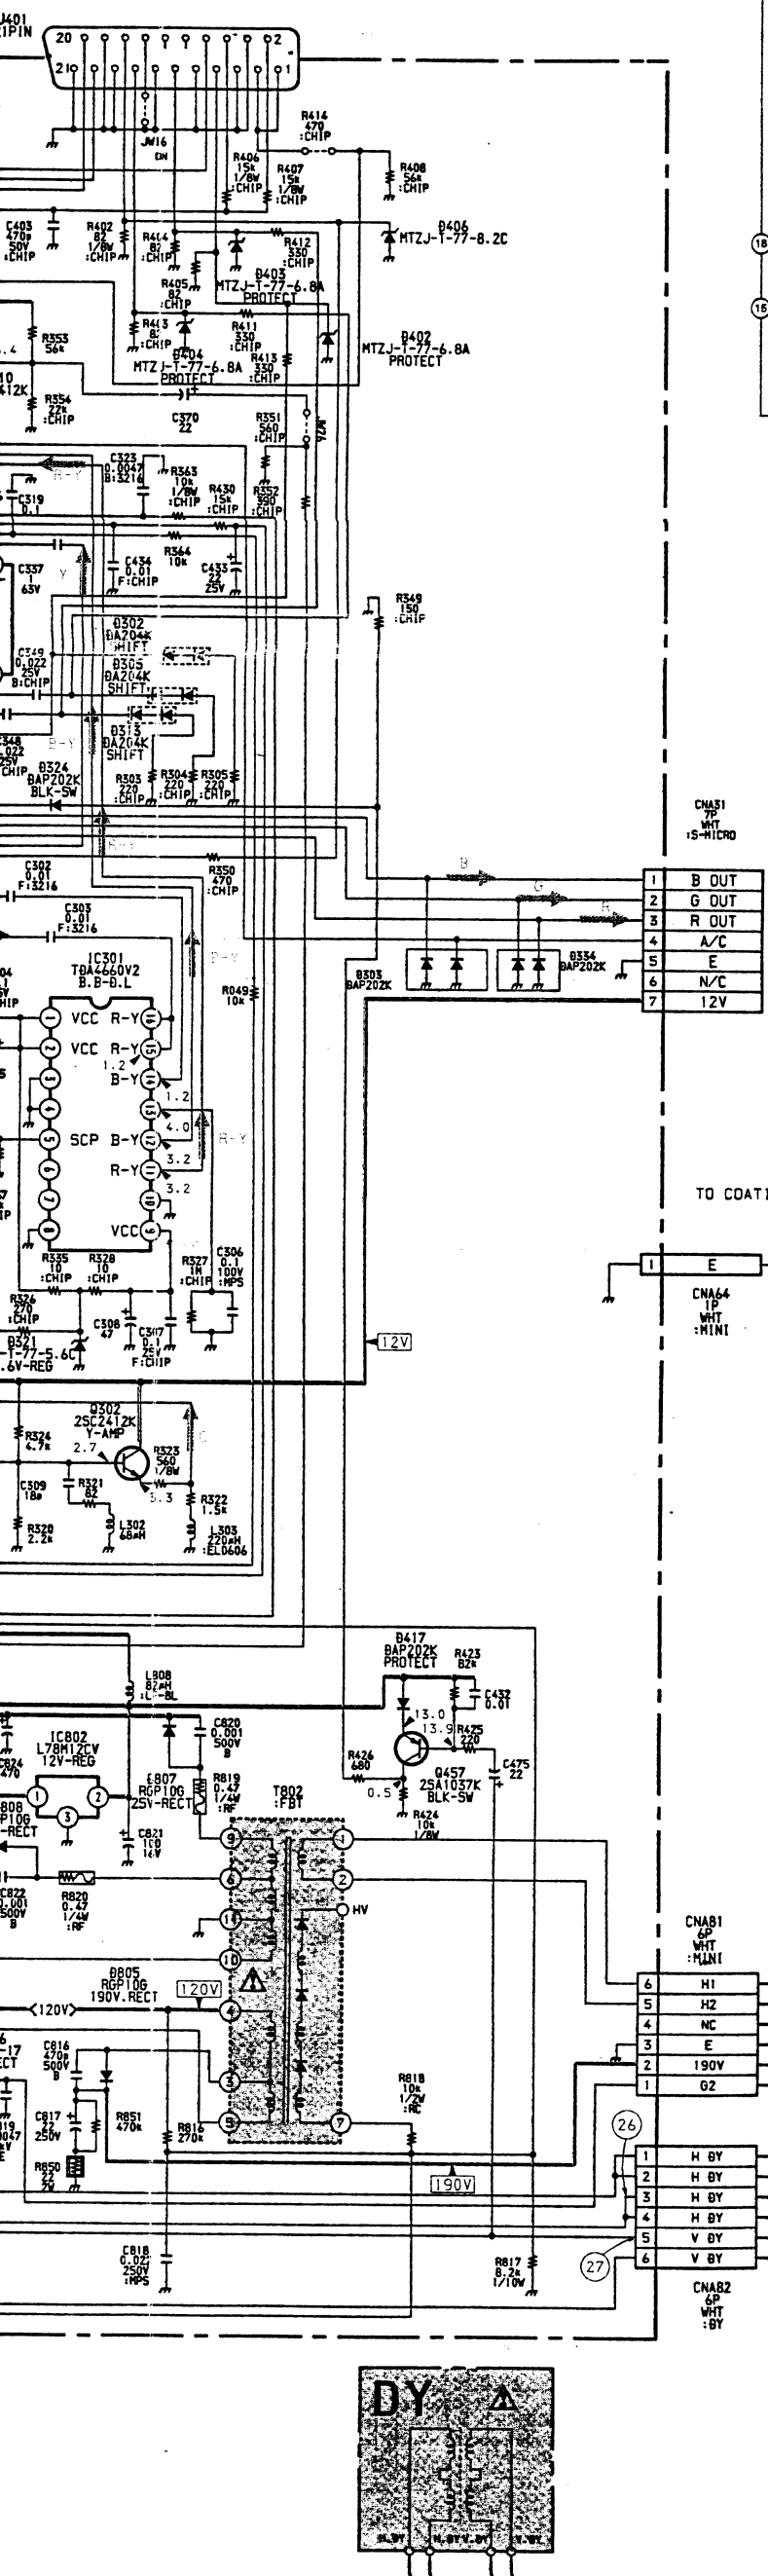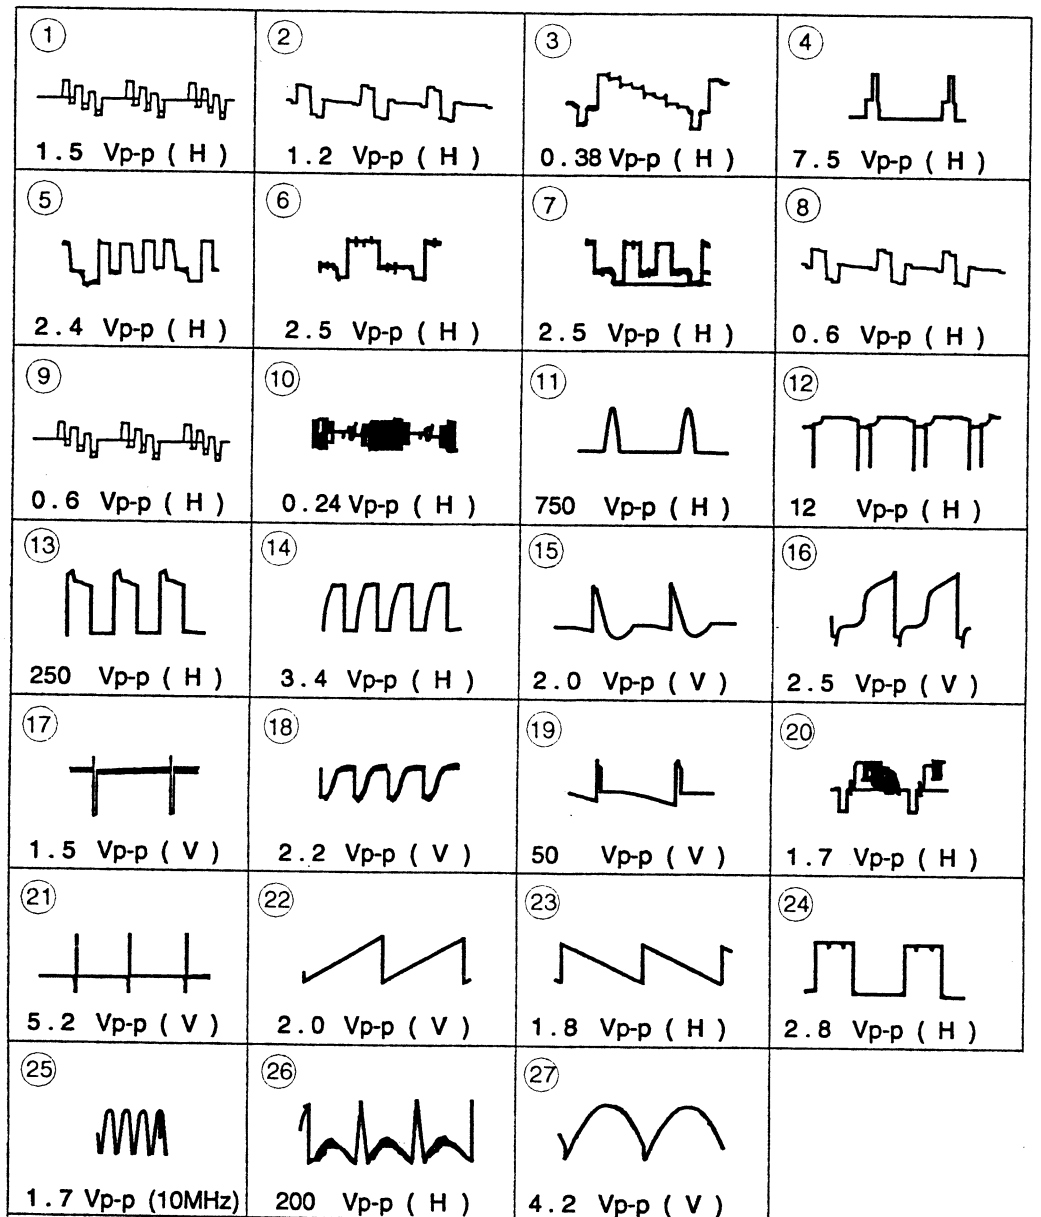



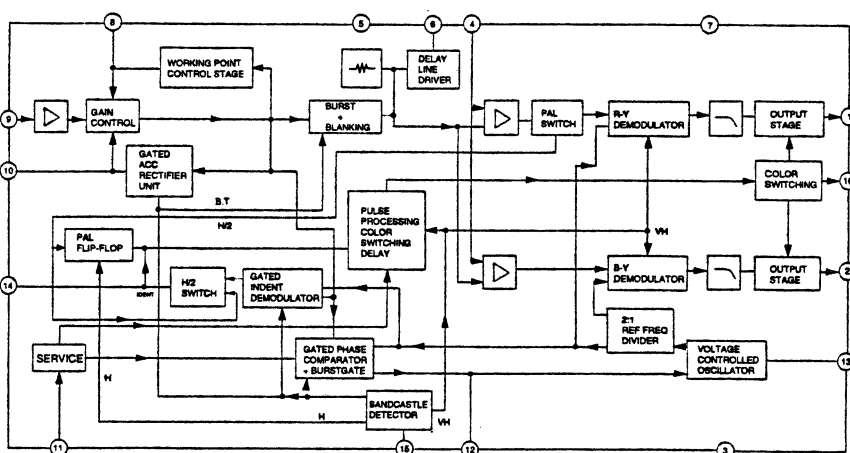


A Board IC302 TDA3505-V1

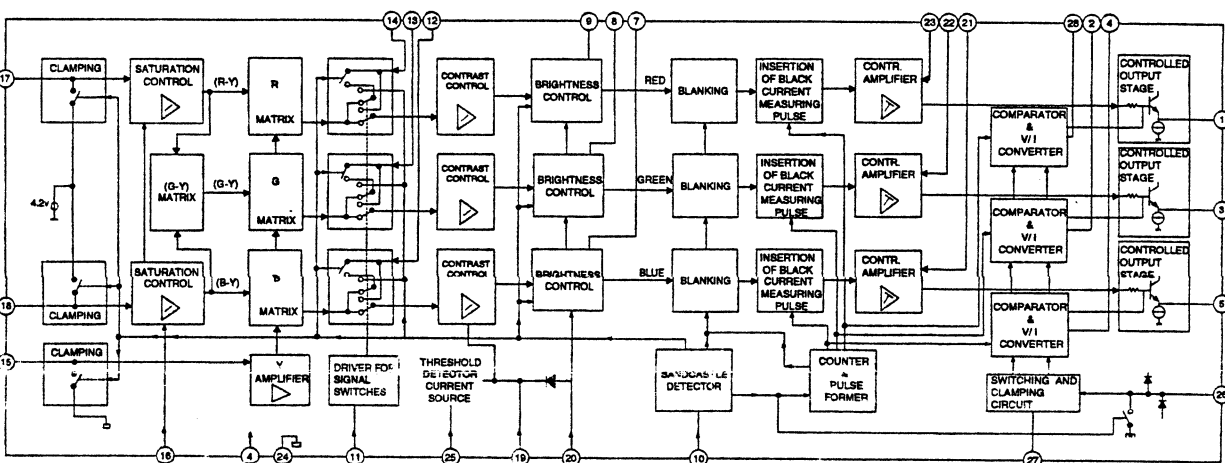


A Board * Mark List


	M1400A	M1400E	M1400/M1401U	M1400L
*1 C112	100pF	100pF	82pF	47p
*2 C123	100pF	100pF	680pF	680p
*3 C527	0.01uF	0.0047uF	0.0047uF	0.0047uF
*4 C531	68pF	68pF	_____	_____
*5 C605	0.047uF	0.001uF	_____	_____
*6 C624	0.001uF	0.001uF	0.001uF	_____
*7 C625	0.22uF	0.22uF	_____	_____
*8 CD101	5.5MHz	5.5MHz	6MHz	6MHz
*9 CF501	5.5MHz	5.5MHz	6MHz	6MHz
*10 D104	DAN202K	_____	_____	_____
*11 L105	10uH	_____	JUMPER	JUMPER
*12 L107	12uH	12uH	10uH	10uH
*13 T603	LFT	LFT	JUMPER	JUMPER
*14 C162	_____	_____	_____	47pF
*15 C362	_____	_____	100pF	_____
*16 R351	560	1.5K	560	560
*17 R517	270	180	270	180
*18 R626	47K	_____	_____	_____
*19 R627	47K	_____	_____	_____
*20 C626	_____	15pF	_____	_____
*21 C627	_____	15pF	_____	_____
*22 L110	_____	_____	_____	10uH
*23 R110	_____	47K	47K	47K
*24 TU101	BT-3C	BT-3C	BT-3C421	BT-3U601
*25 XF501	5.5MHz	5.5MHz	6MHz	6MHz
*26 C518	_____	_____	_____	82pF
*27 R133	_____	_____	_____	2.2K

A BOARD WAVEFORMS

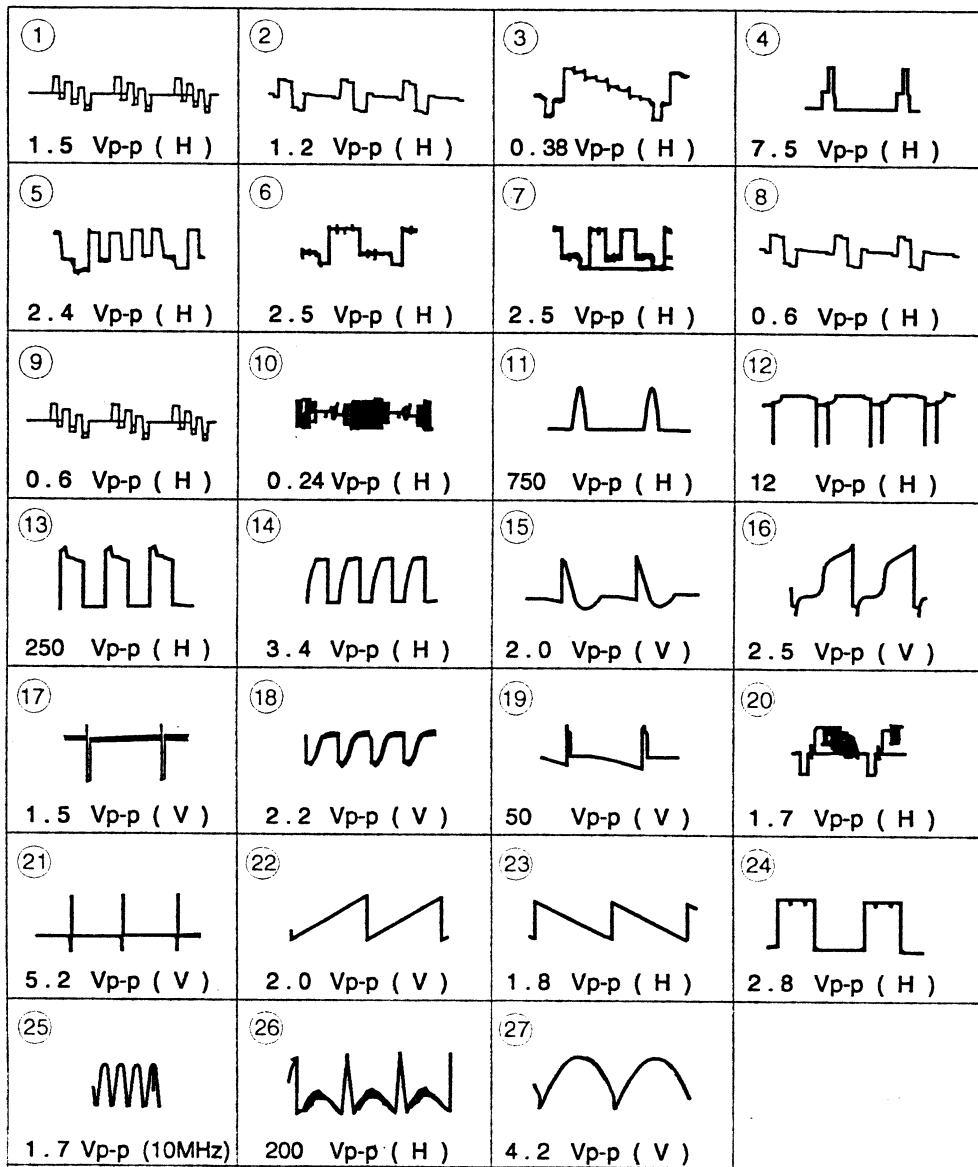


A { SYSTEM CONTROL
A/V OUT. H/V OUT
MEMORY CHROMA }


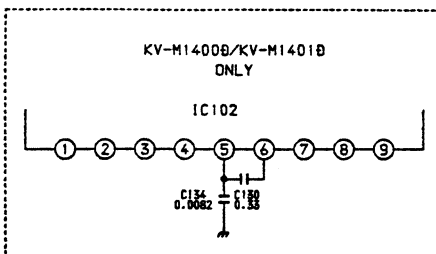


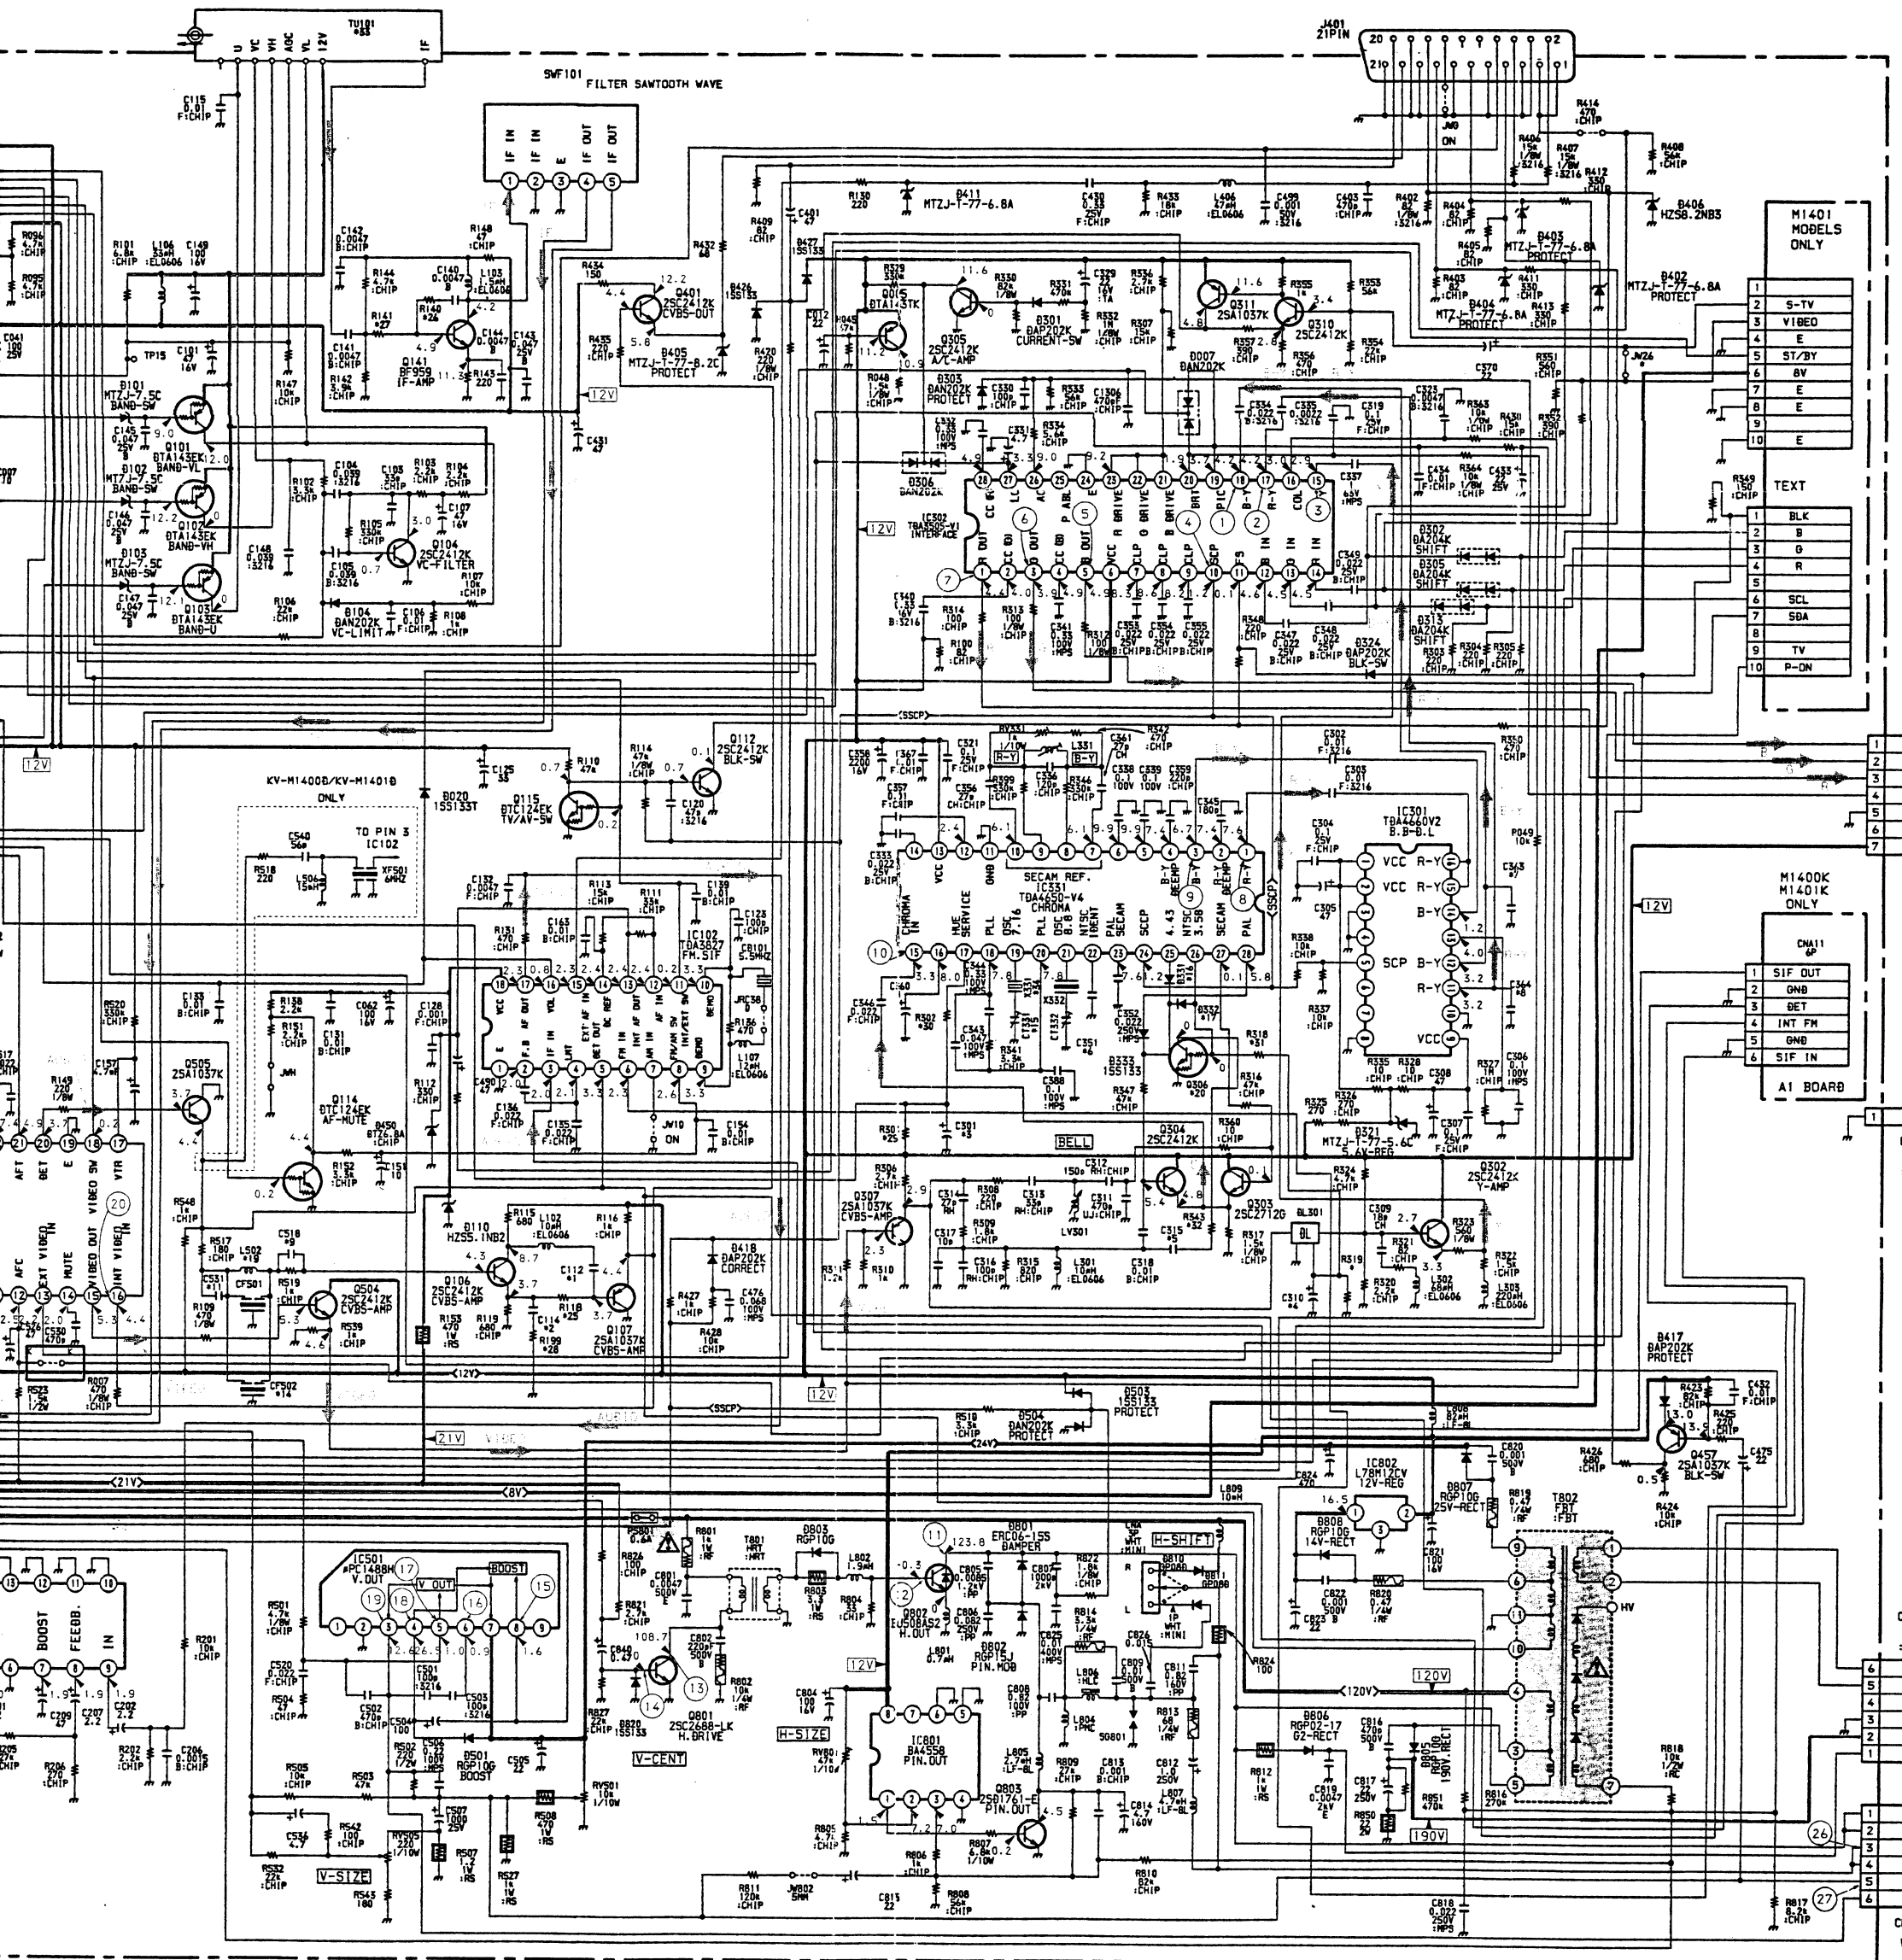


A Board IC302 TDA3505-V1

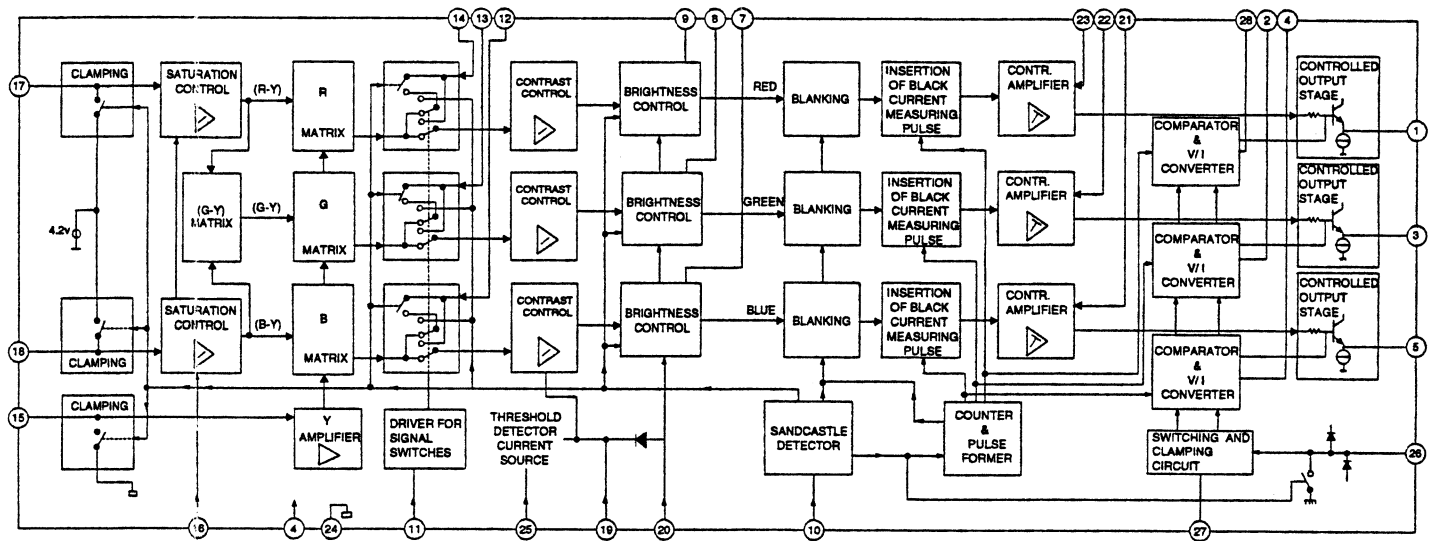

A Board IC331 TDA4650-V4

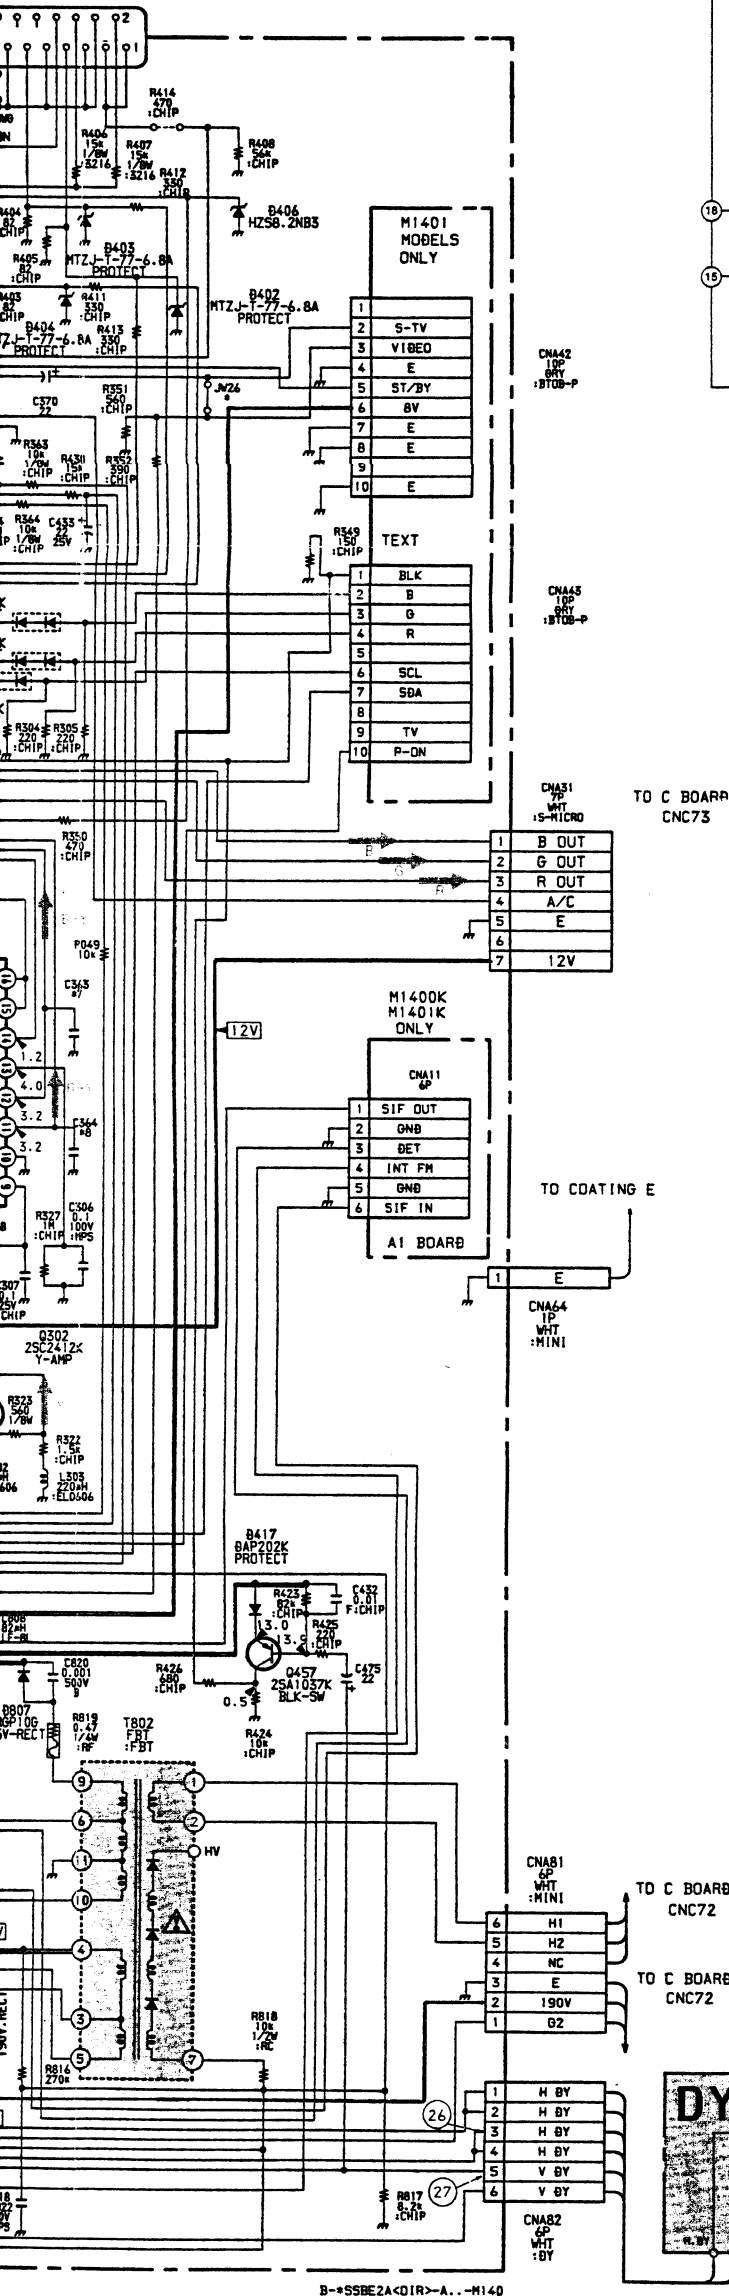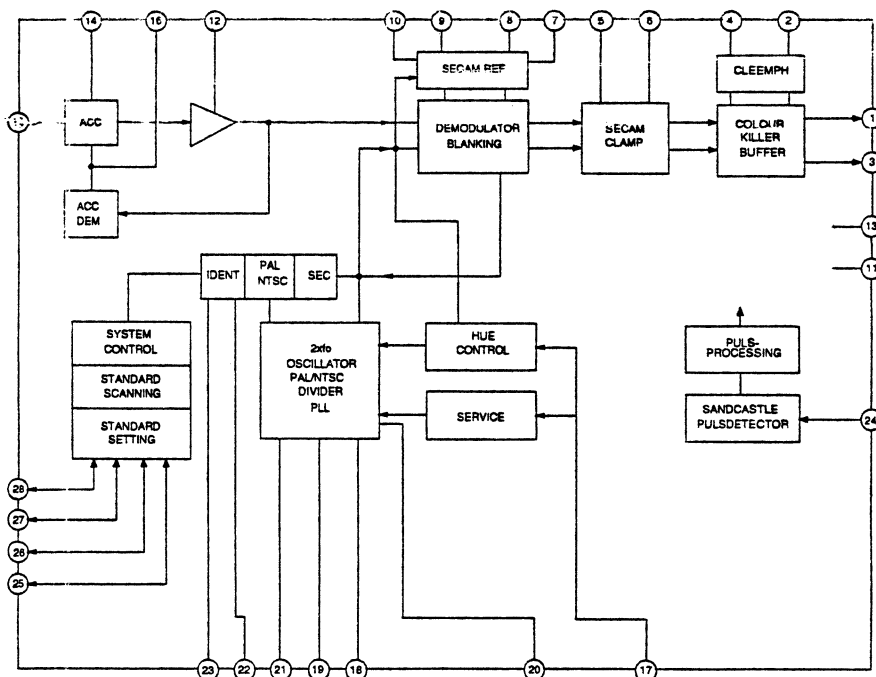


A BOARD WAVEFORMS

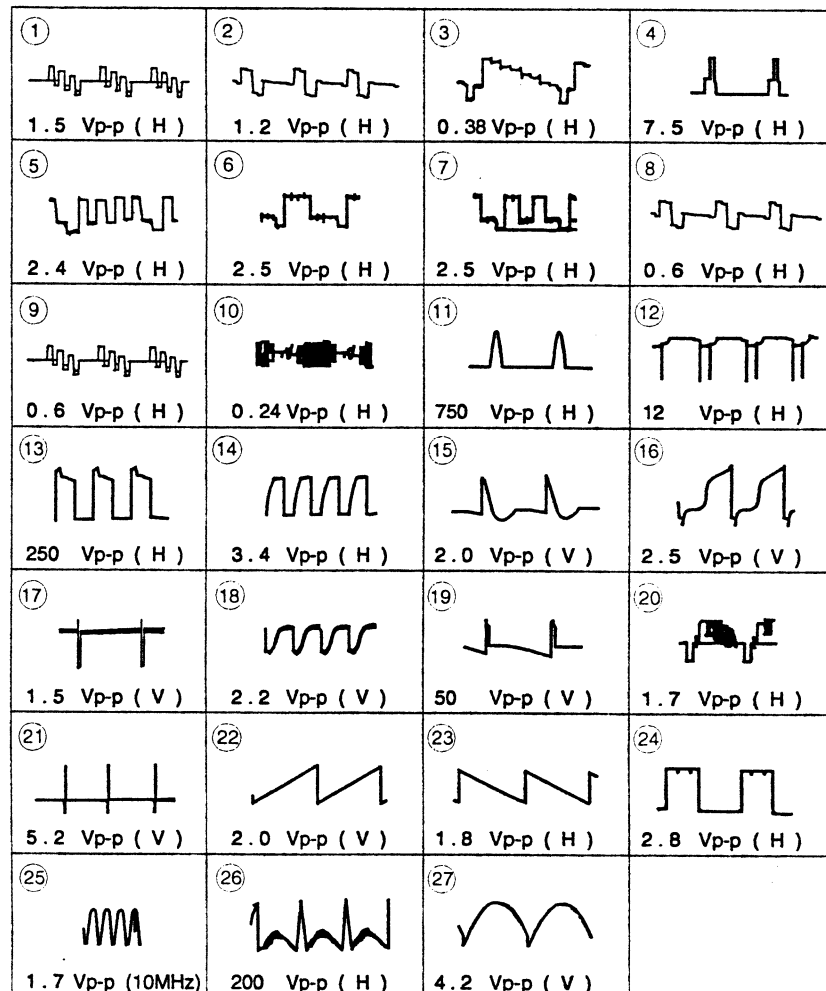



A Board Mark List







	M1400/1401K	M1400/1401D
*1 C112	47pF	220pF
*2 C114	330pF	47pF
*3 C301	10MF	
*4 C310	33MF	JUMPER
*5 C315	68pF	
*6 C351	0.022MF	
*7 C363	680pF	
*8 C364	680pF	
*9 C518	100pF	
*10 C527	0.01MF	
*11 C531		68pF
*12 C626	15pF	
*13 C627	15pF	
*14 CF502	TRAP 6.5Mhz	
*15 CT331	CAP ADJ	JUMPER
*16 D331	1SS119	
*17 D332	1SS119	
*18 L111	10uH	
*19 L502	4.7uH	8.2uH
*20 Q306	DTC124EK	
*21 R070	1.8K	
*22 R071	3.9K	
*23 R086	4.7K	
*24 R089	3.9K	
*25 R118	330	270
*26 R140	330	680
*27 R141	68	150
*28 R199	150	2.2K
*29 R301	15K	
*30 R302	220	
*31 R318	47K	
*32 R343	180	
*33 TU101	BT-3C 301	BT-3C 421
*34 X331	OSCILLATOR	JUMPER
*35 C605		0.001MF
*36 C698		330pF
*37 R626		47K
*38 R627		47K
*39 R629		330

NOT MOUNTED

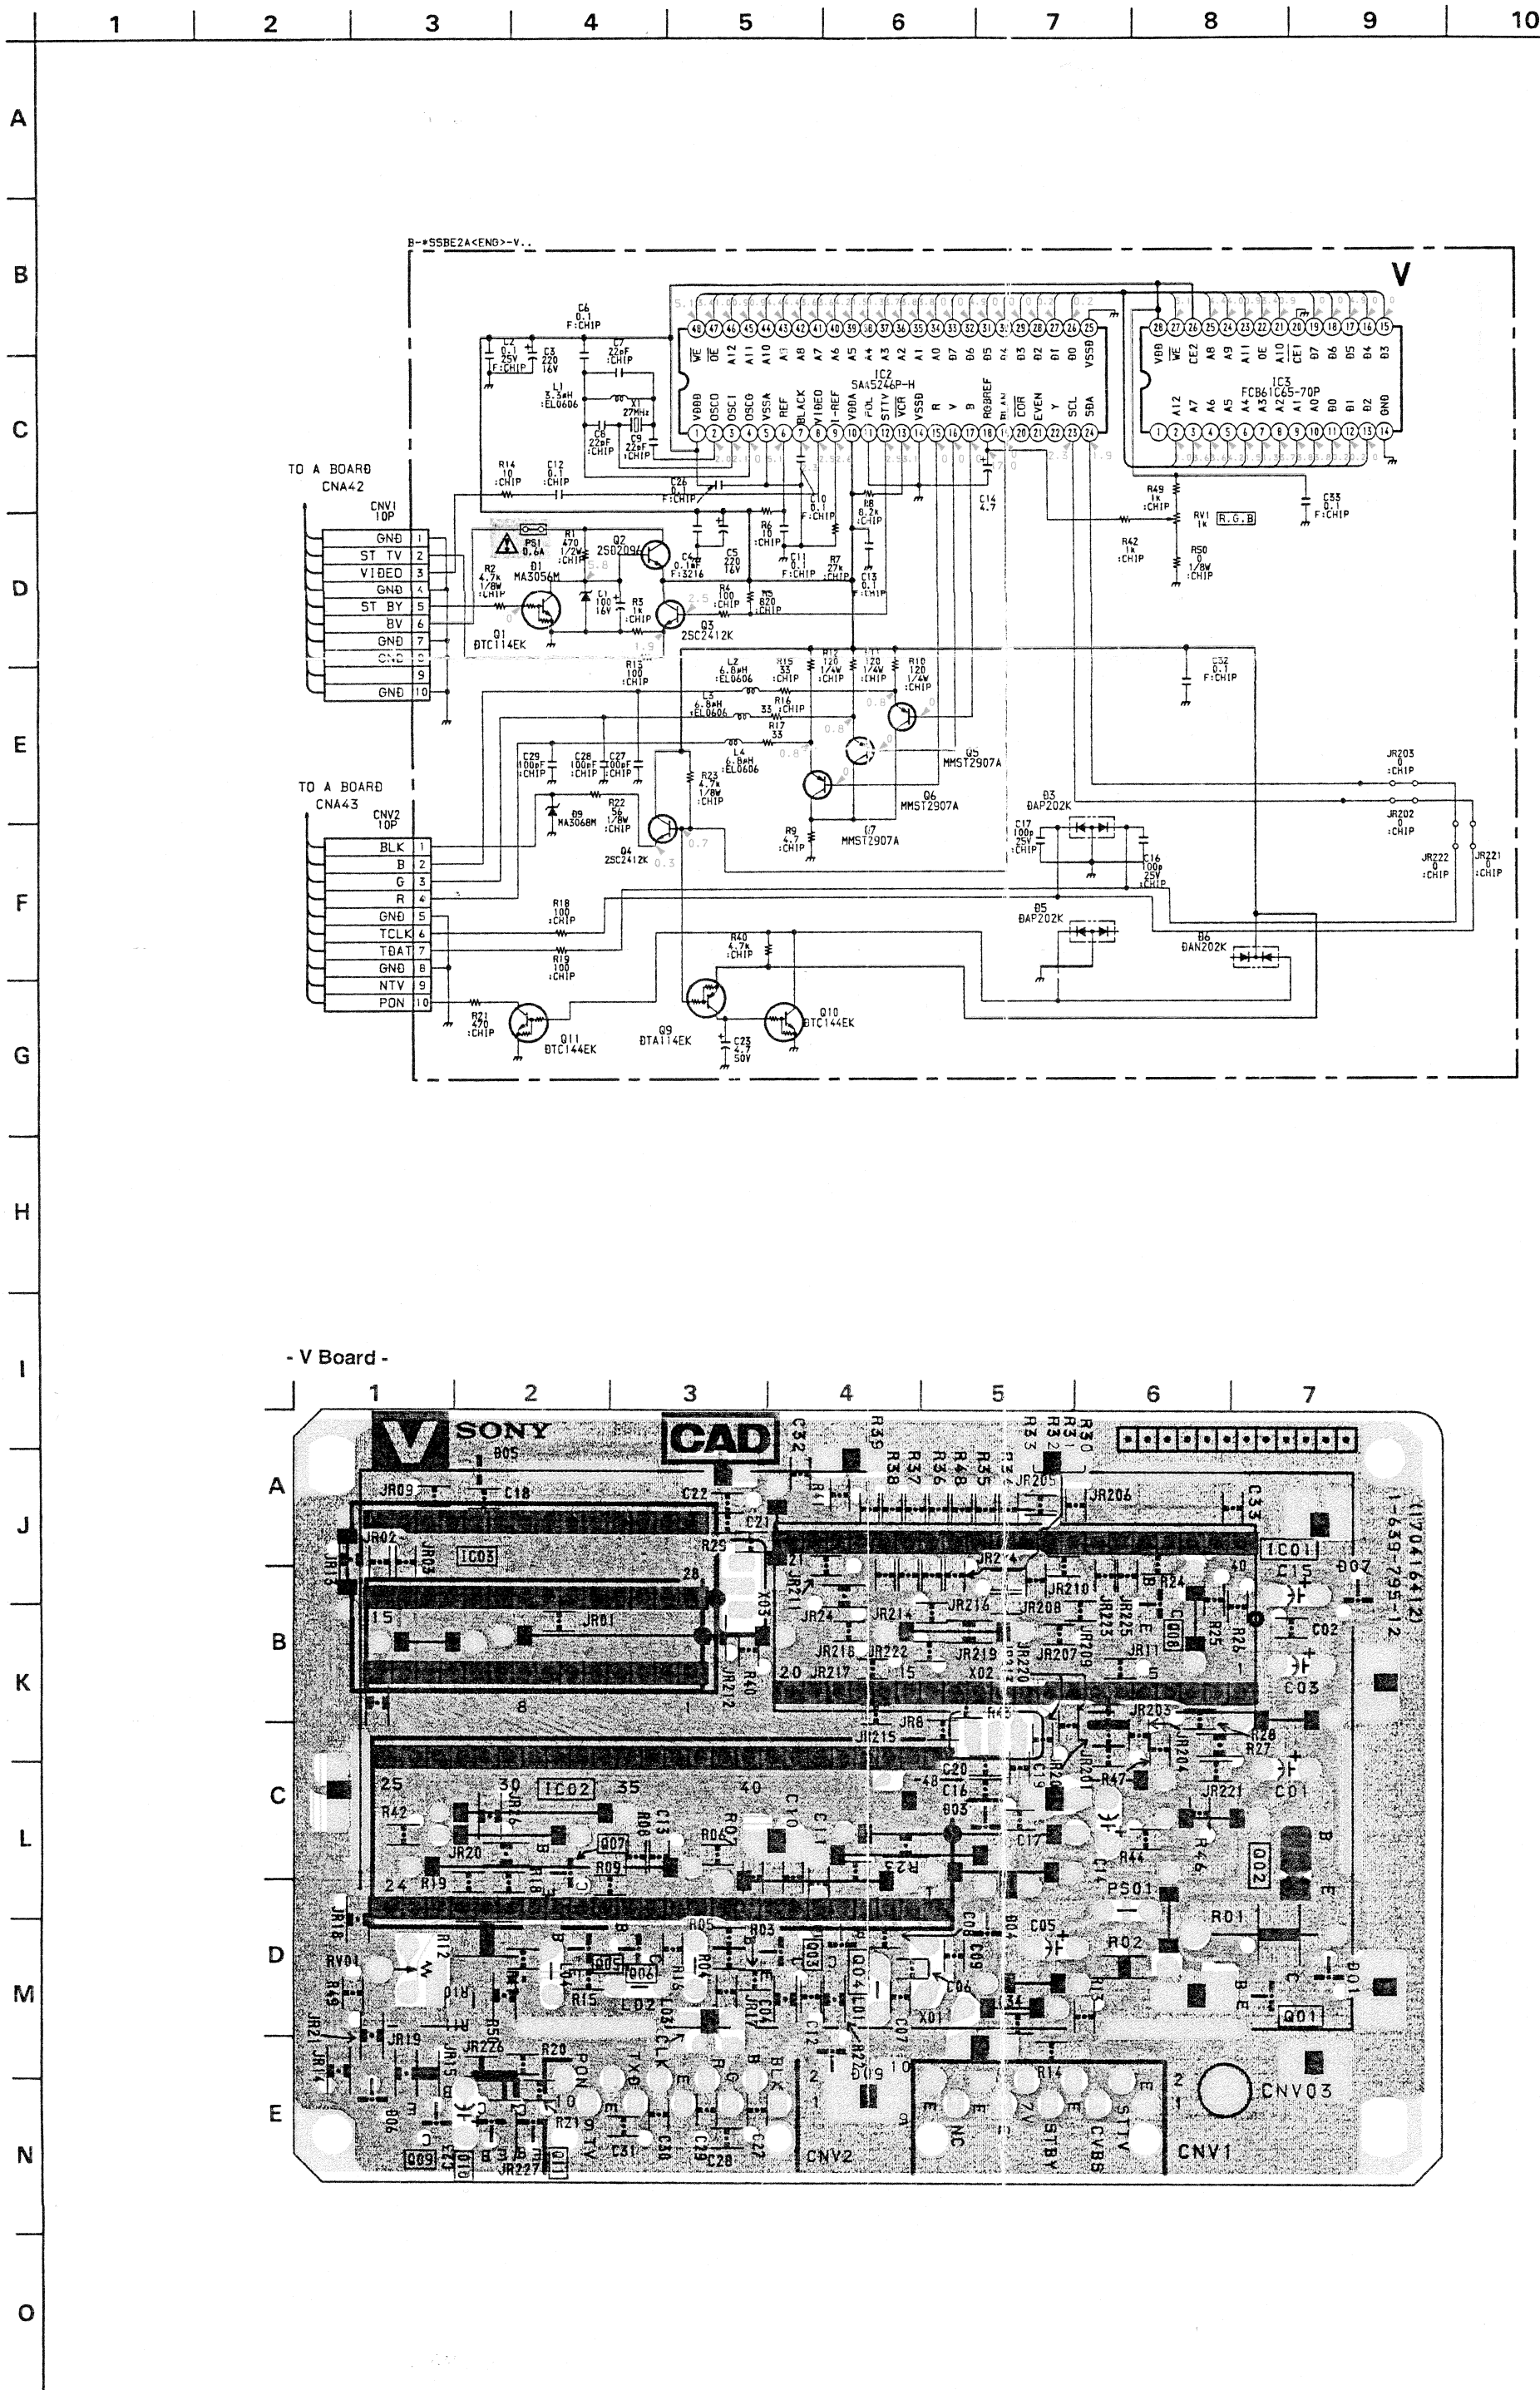

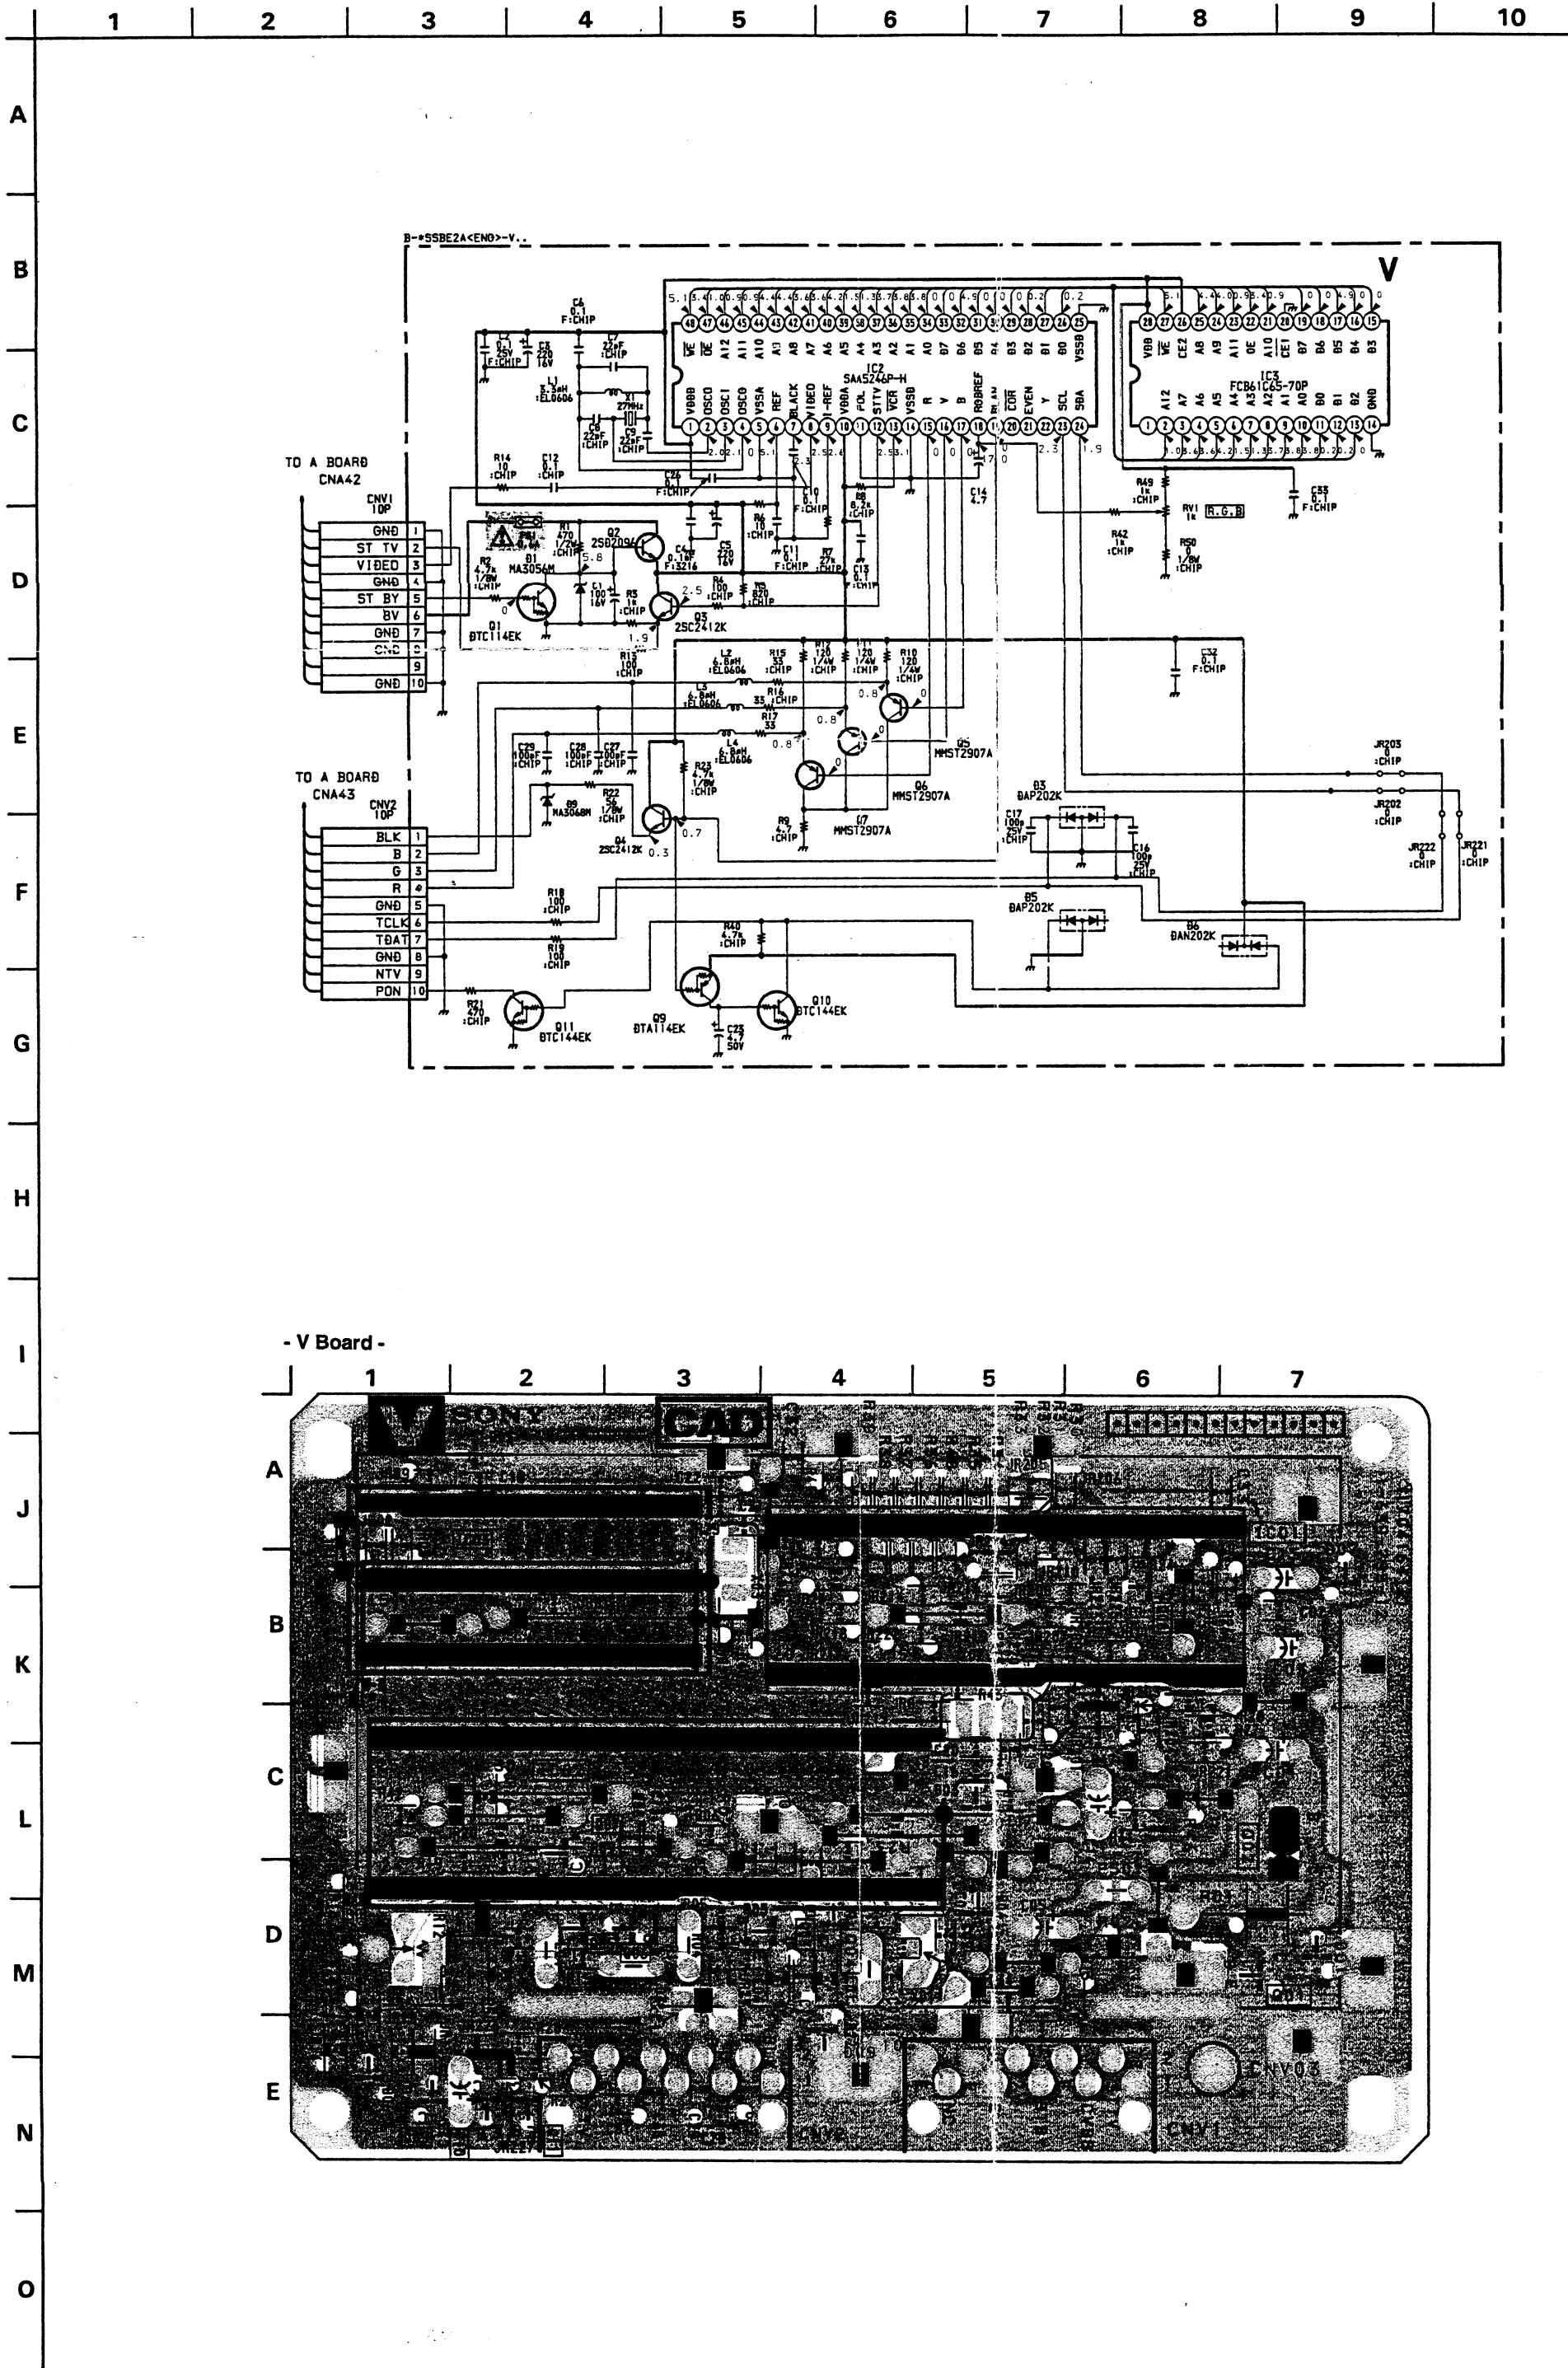

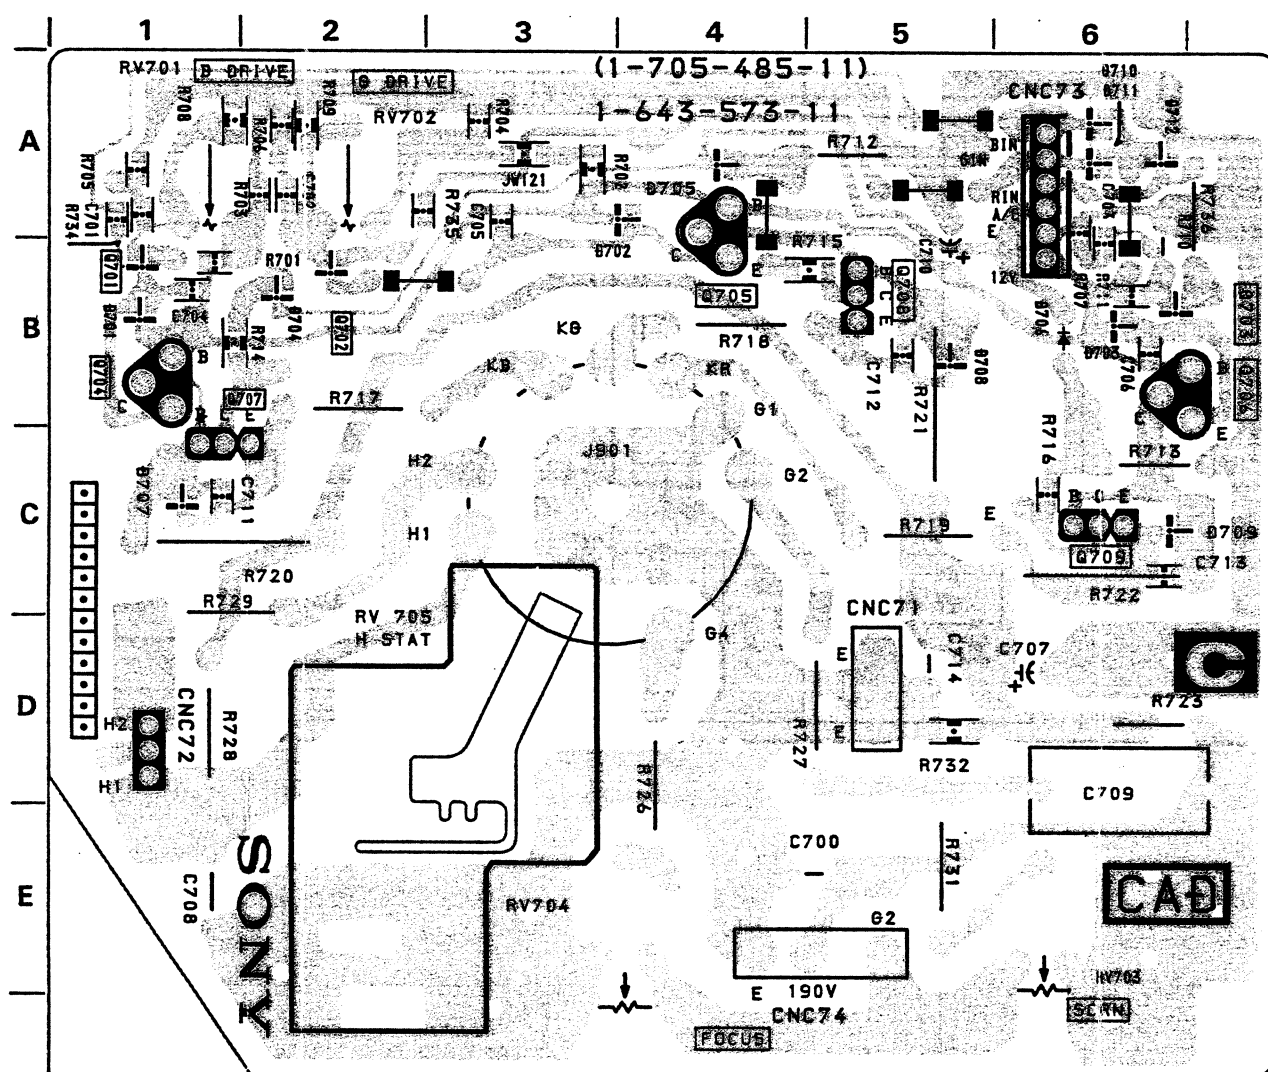

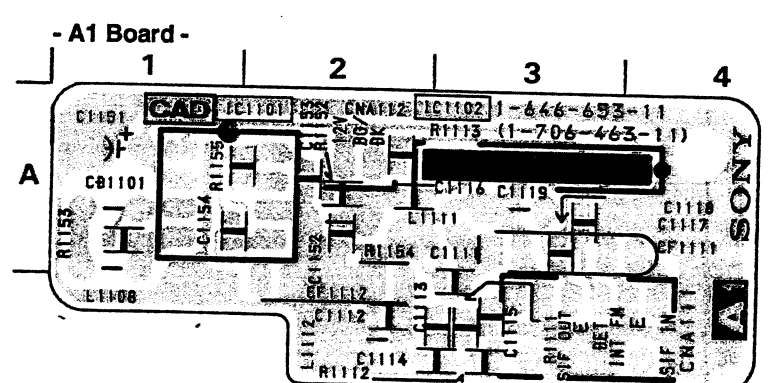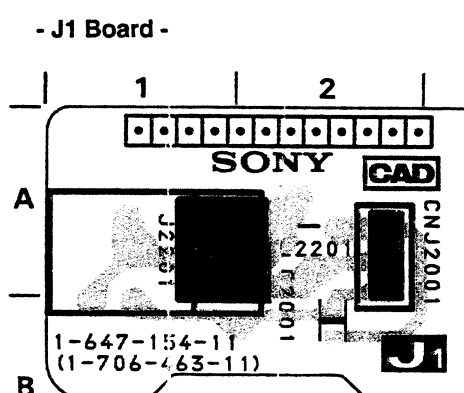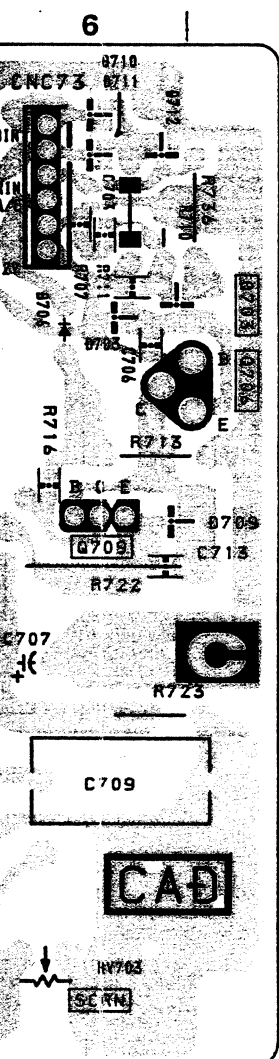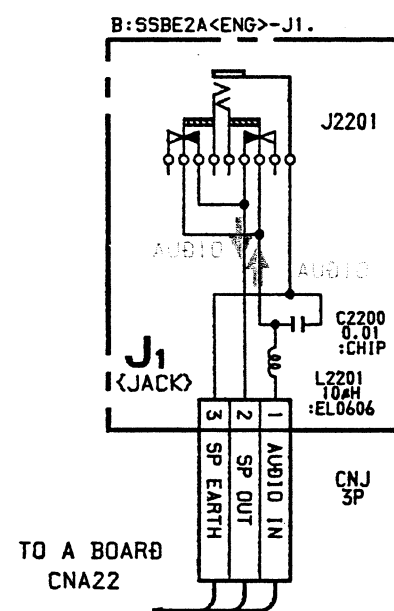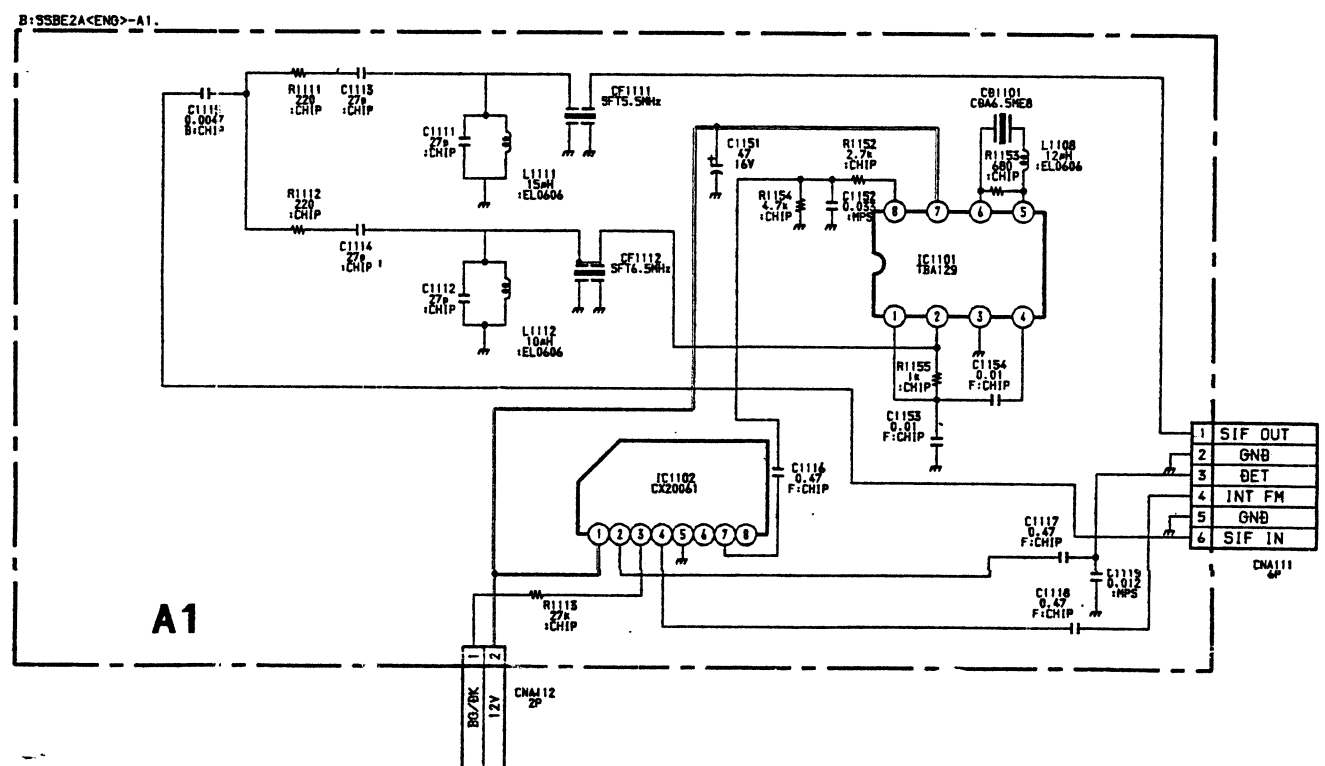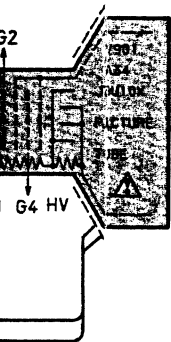

SCHEMA ELETTRICO DEL GRUPPO ALTA FREQUENZA TERE1-054A (BT-3C 301)

